 
 
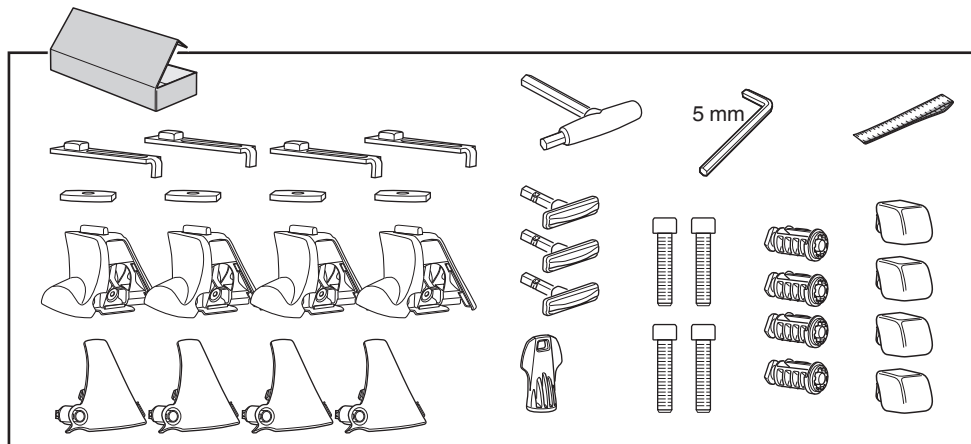 
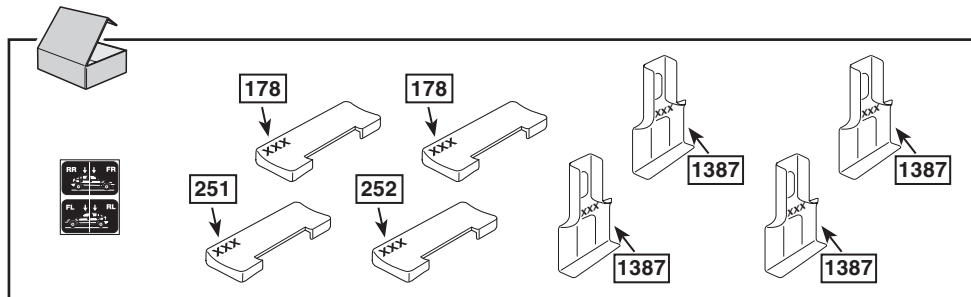 
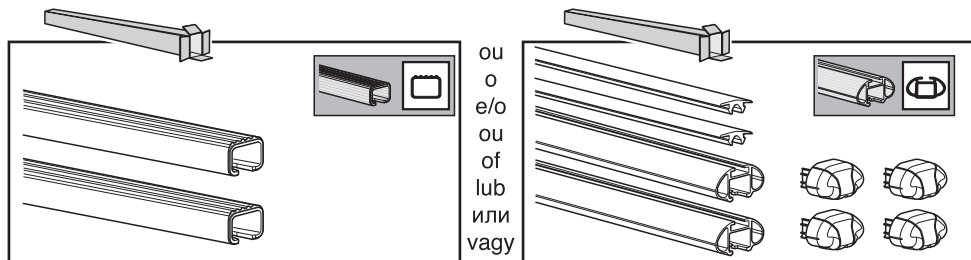 
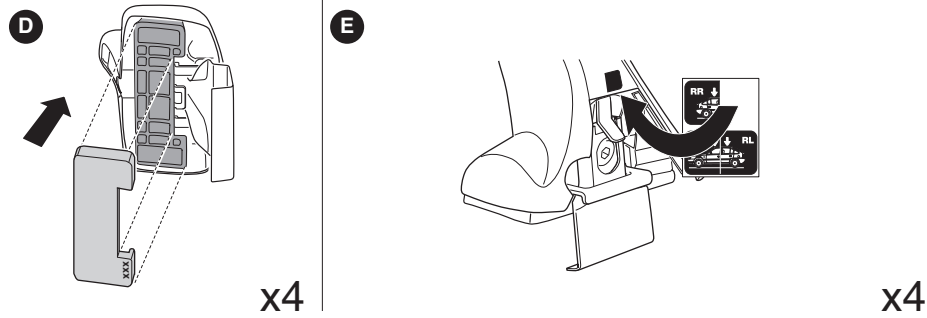 
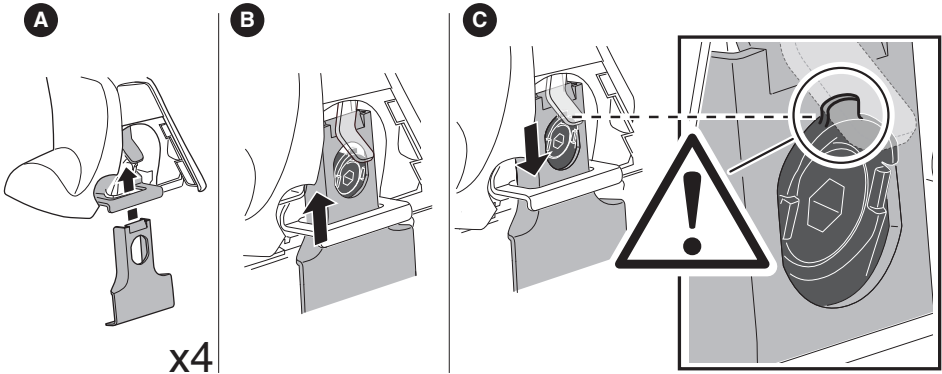 


- F Instructions de montage
- E Instrucciones de montaje
- I Istruzioni per il montaggio
- PT Instruções de montagem
- NL Montage-instructies
- PL Instrukcja montażu
- RU Инструкции по установке
- RO Instrucțiuni de montaj

 
 
 
 
 
 
RENAULT Mégane (IV), 5-portes/doors, 16-

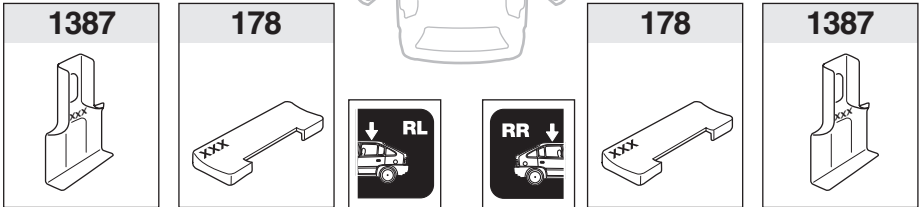






1


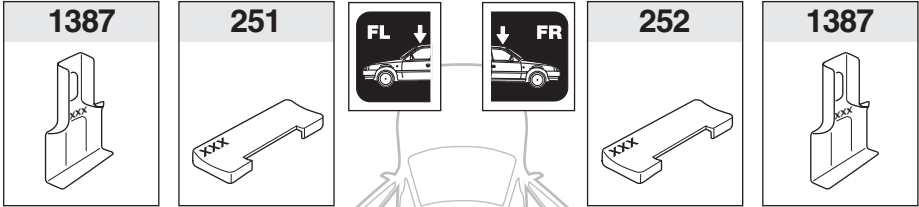


2

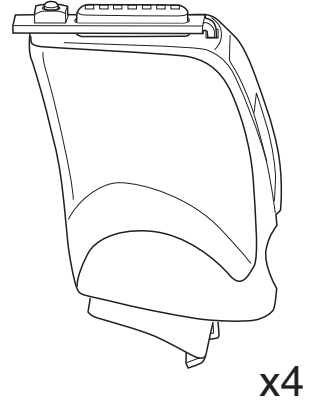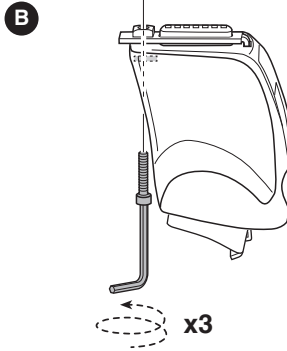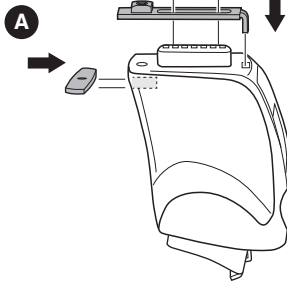

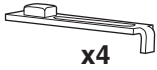
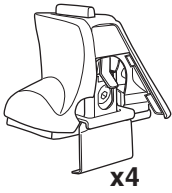


3

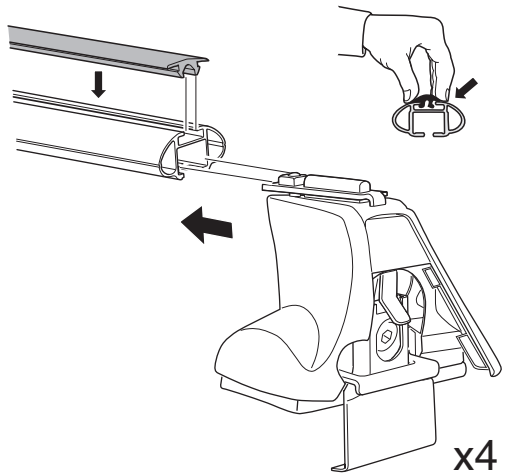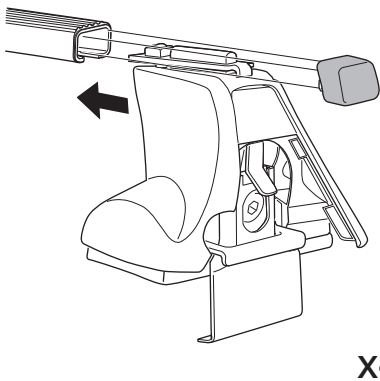    
 


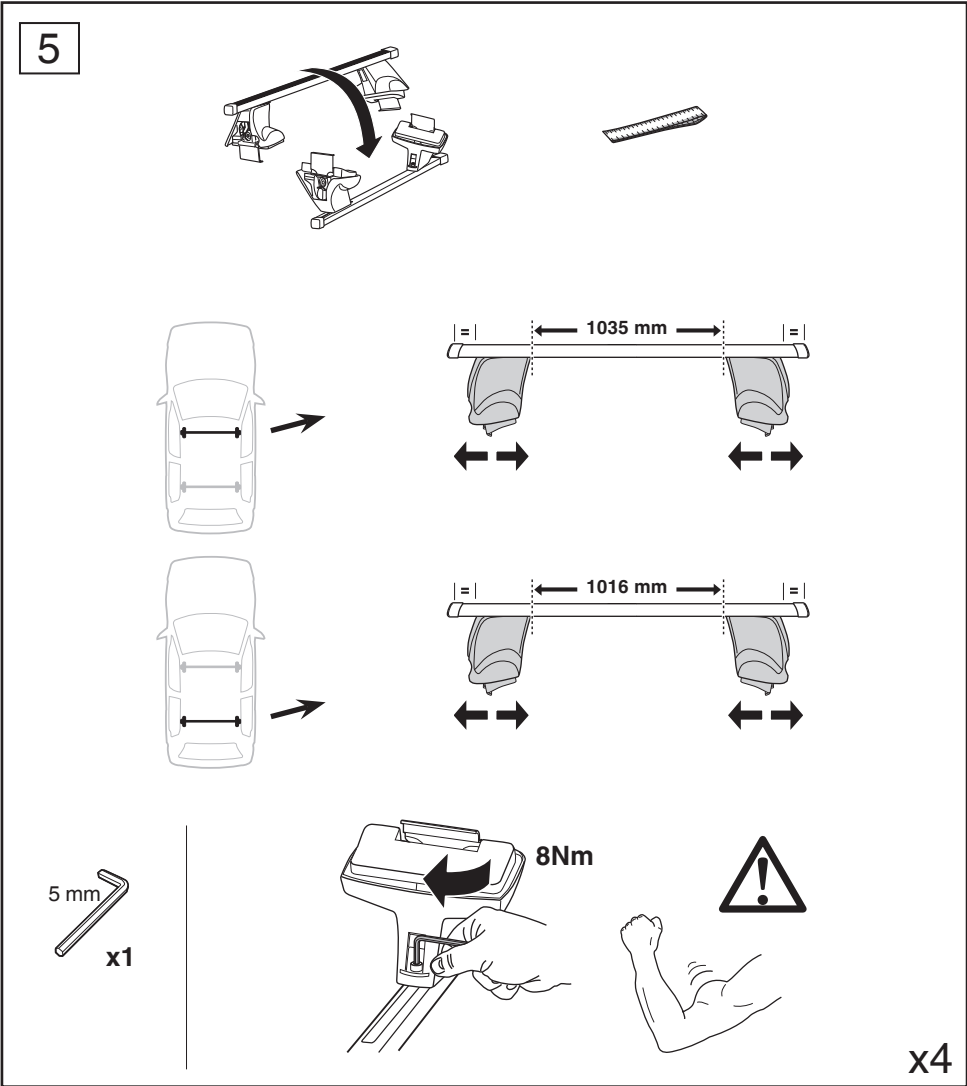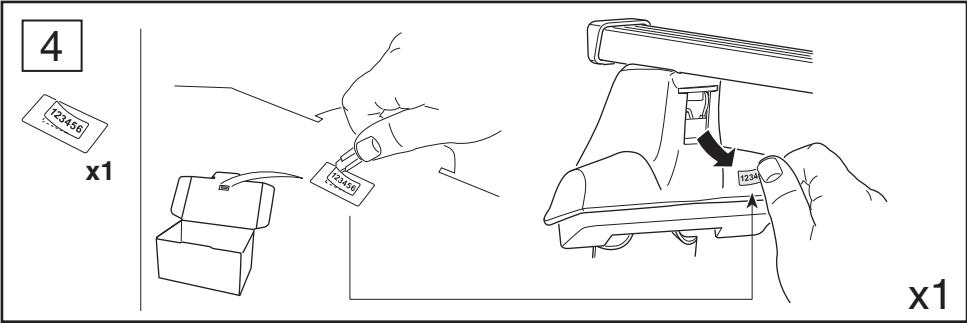  


6

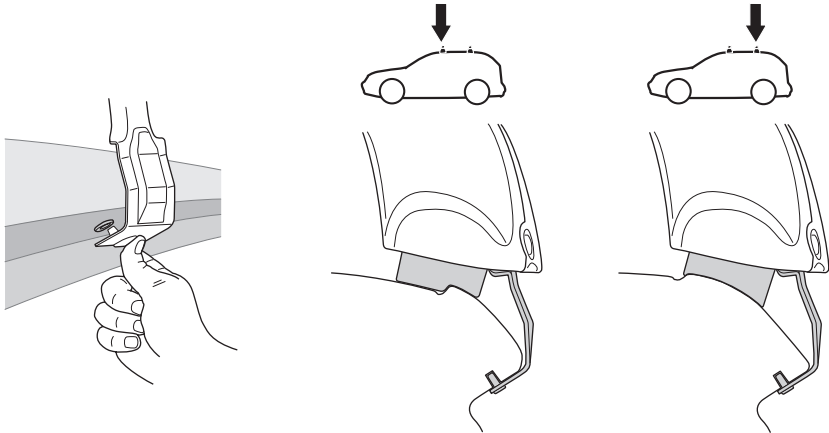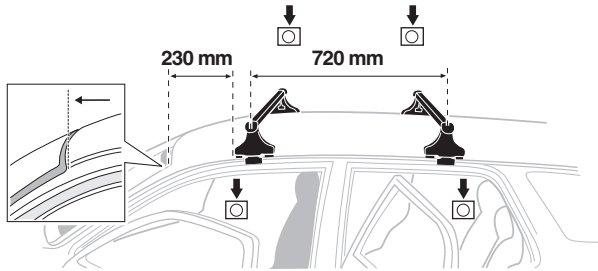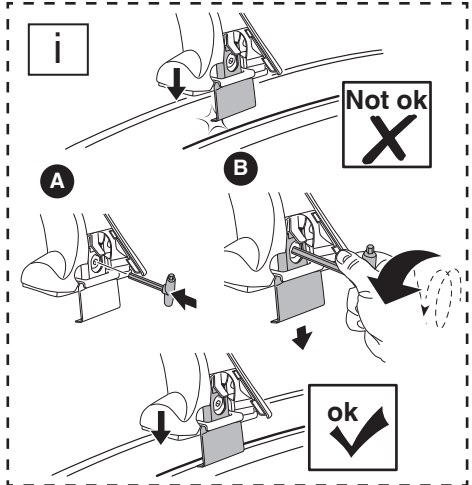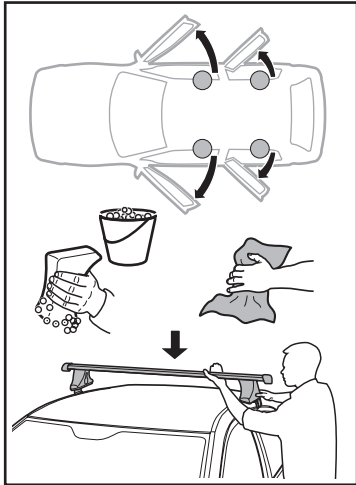    


7

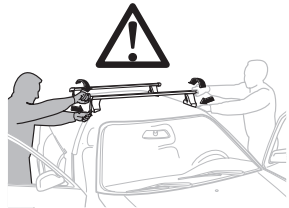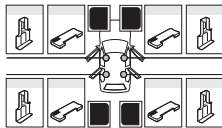  

 
- F Serrer alternativement chaque côté
- E Apretar alternativamente
- I Alternare il serraggio delle viti
- PT Aperte alternadamente
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- PL Śruby dokręcaj naprzemiennie
- RU Затягивайте попеременно
- RO Strângeți alternativ





A

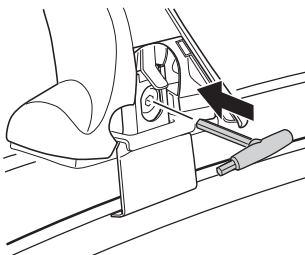 

B x4

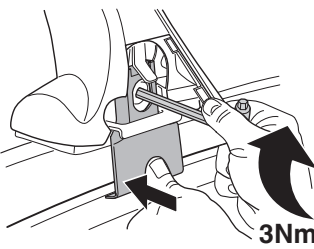 


C

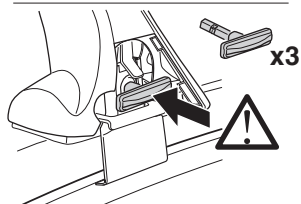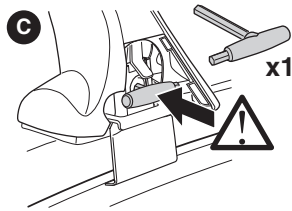  


8



 
A

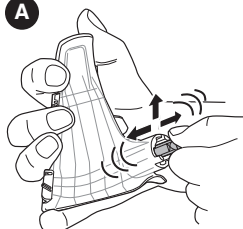

B

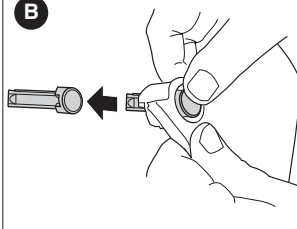 


C

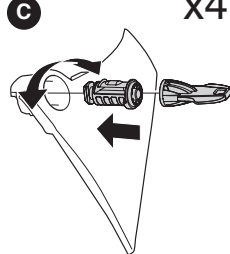 



x4

 D

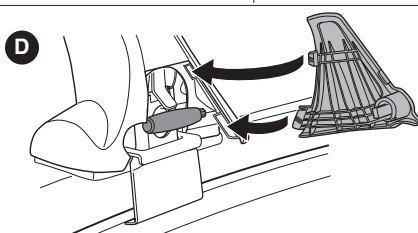

x1





 
 
E




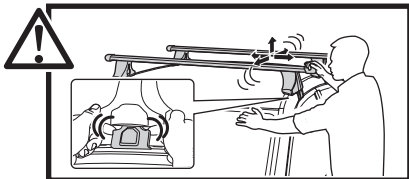
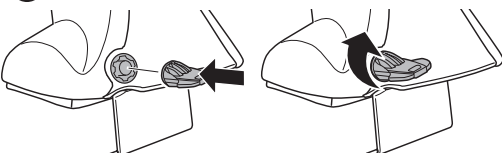




F Démontage
E Desmontaje
I Rimozione
PT Remoção

           NL Demontage
PL Wymontowywanie
RU СНЯТИЕ
RO Demontare

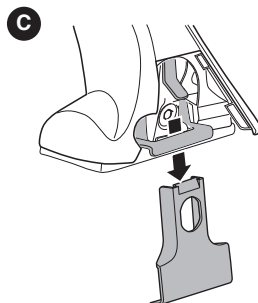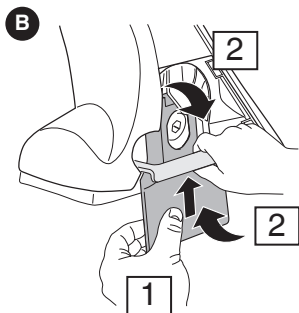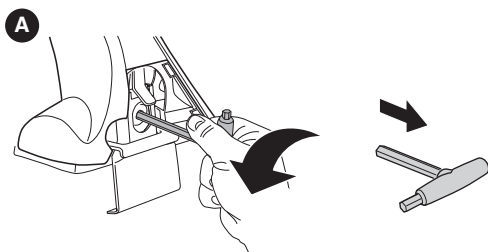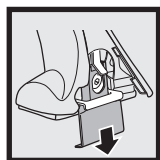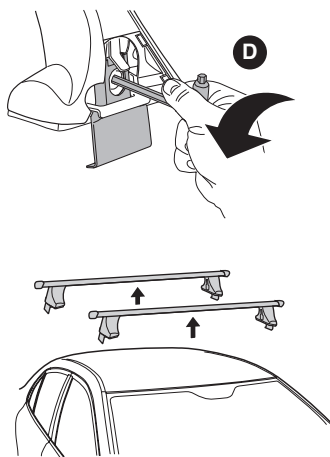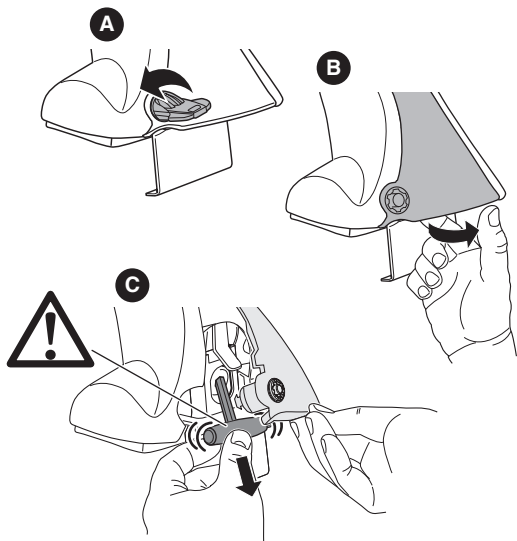

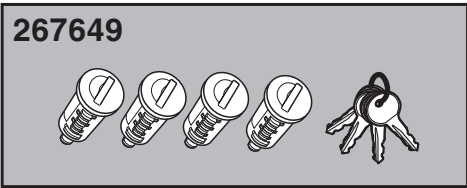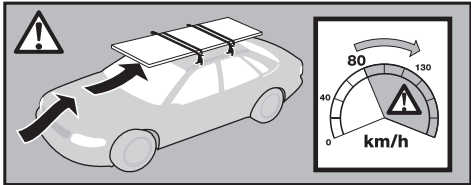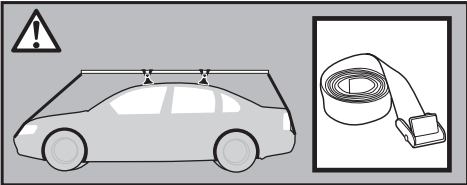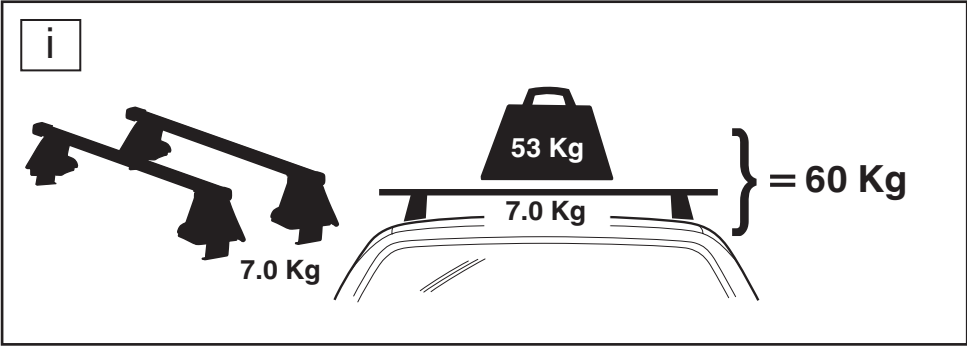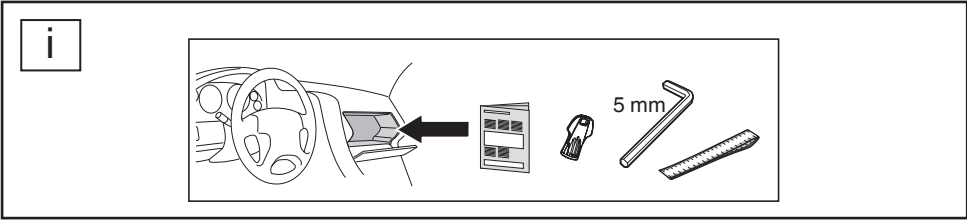

NORAUTO:
511/589 rue des Seringats
59262 Sainghin-en-Mélantois
FRANCE