 
 
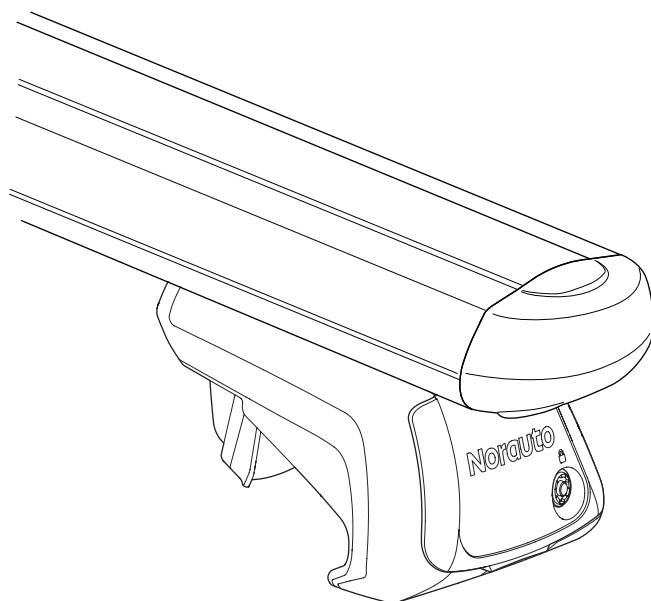 
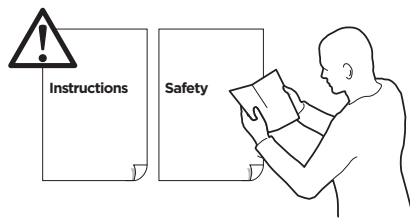 
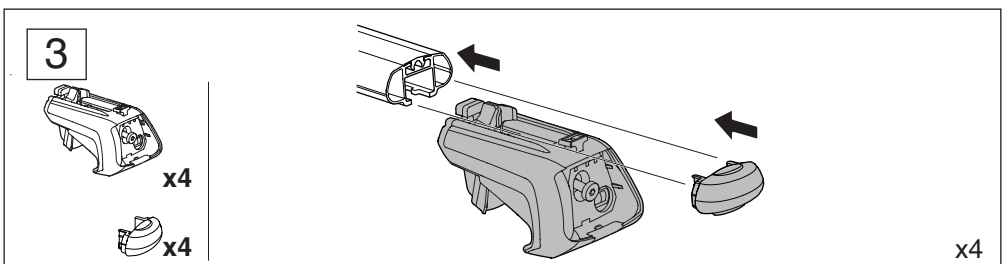 
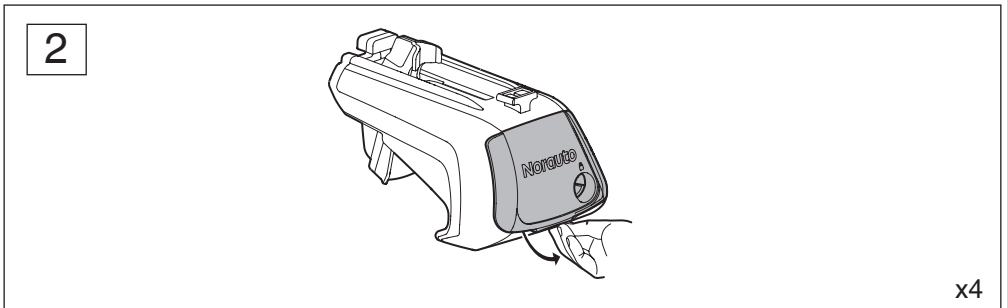 


Norauto

 
FR Instructions de montage
ES Instrucciones de montaje
PT Instruções de montagem
IT Istruzioni per il montaggio
DE Montageanleitung
PL Instrukcja montażu
NL Montage-instructies
EN Instructions
KO 지침
JA 取扱説明書
ZH 說明

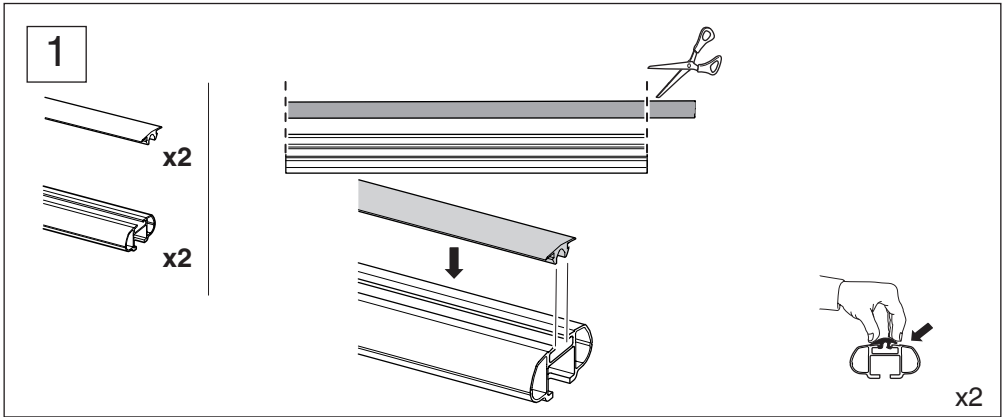

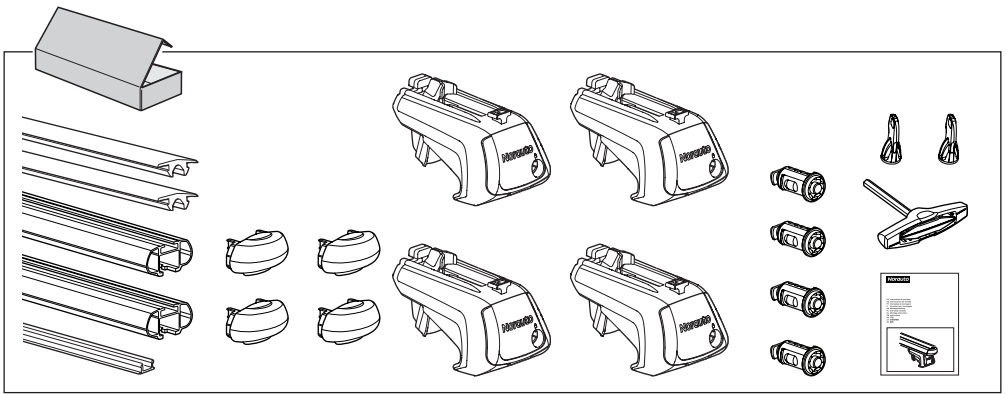

4




A






B



   5

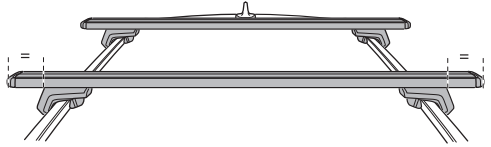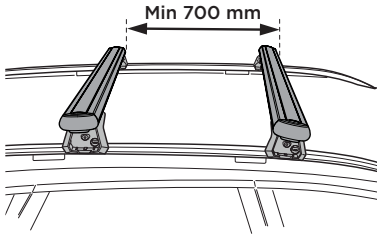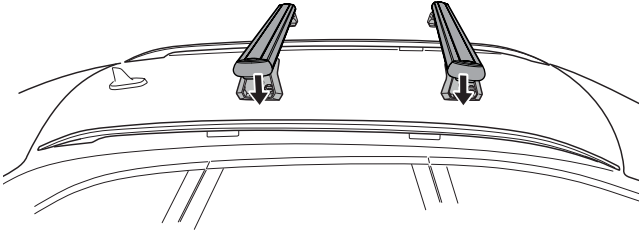

6

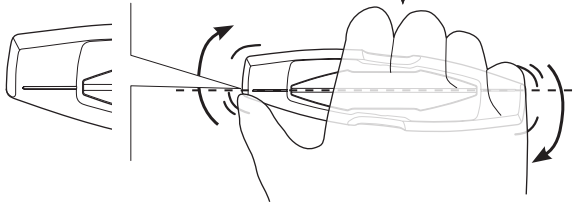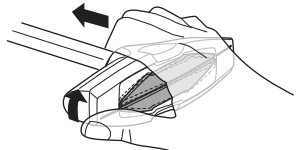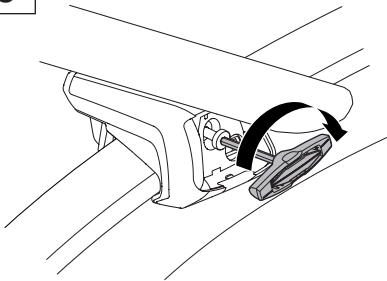   

≈ 4 Nm

x4

7



x4

 


x4




x1

A

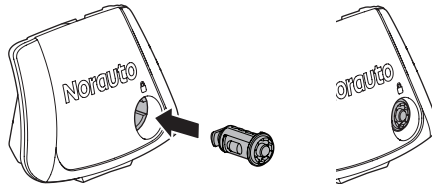


x4

 B

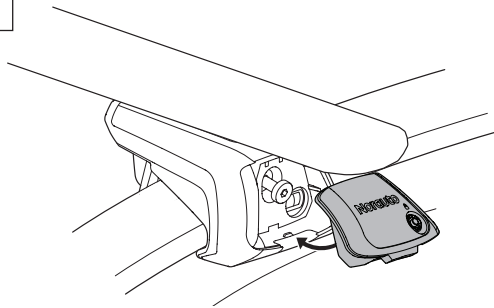


x4

 C

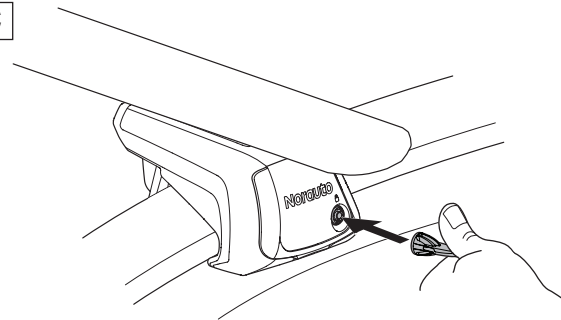


x4

 D



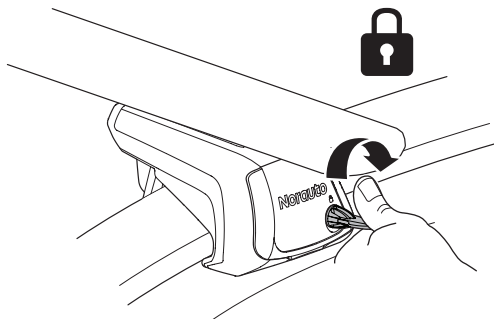


x4

 8

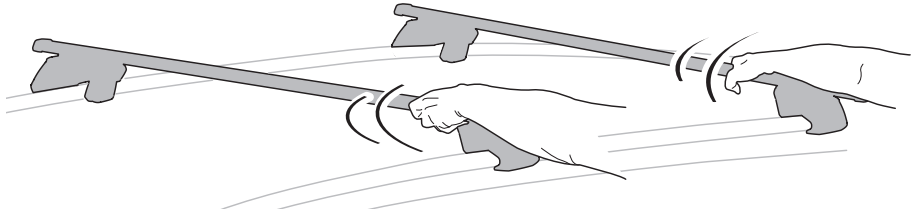

9

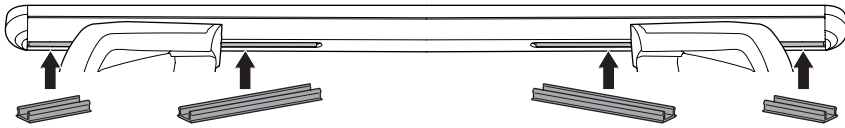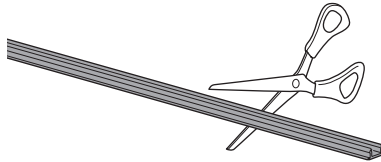   

x2

 
i

FR Démontage
ES Desmontaje
PT Remoção
IT Rimozione

DE Demontage
PL Wymontowywanie
NL Demontage
EN Removing


KO 제거
JA 取り外し
ZH 移除

A

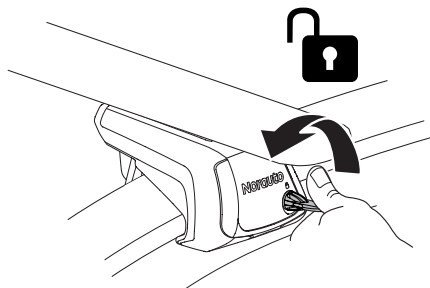


x4

 B

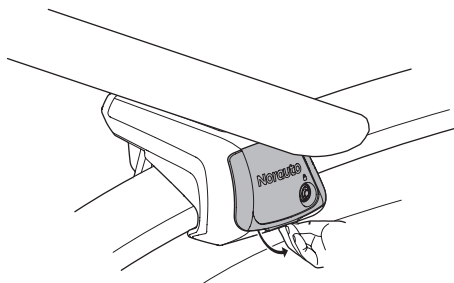


x4



 
C

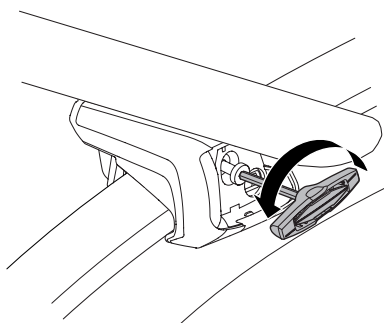


x4

    D

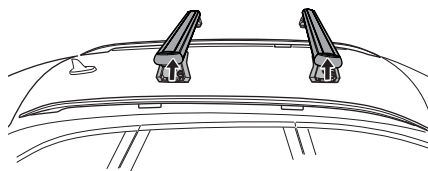

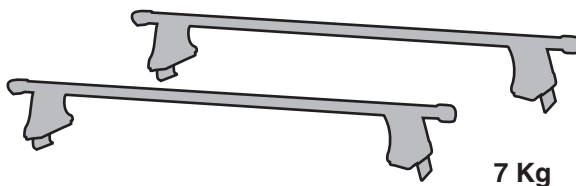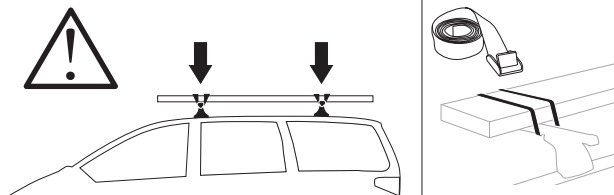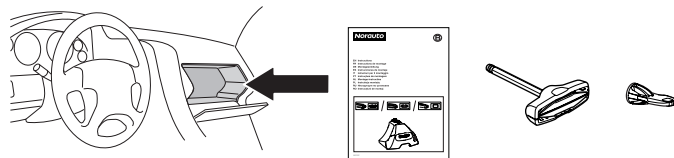

**2272280
(NO7653)**

 

NORAUTO
511/589 rue des Seringats
59262 Sainghin-en-Mélantois
FRANCE