


5/142


I - Trasforma il segnale amplificato dell'autoradio in pre-amplificato e ricava un'uscita +12V (remote).
GB - Transforms radio-signal from amplified into pre-amplified and creates a +12V exit (remote).
F - Pour transformer le signal autoradio amplifie en pre-amplifie et pour creer une sortie +12V (remote).
D - Wandelt das Autoradio-Signal von verstärkt in vorverstärkt und stellt einen +12V-Ausgang her (Remote).
E - Trasforma la señal amplificada del autoradio en pre-amplificada y extrae una salida de +12V (Remoto).

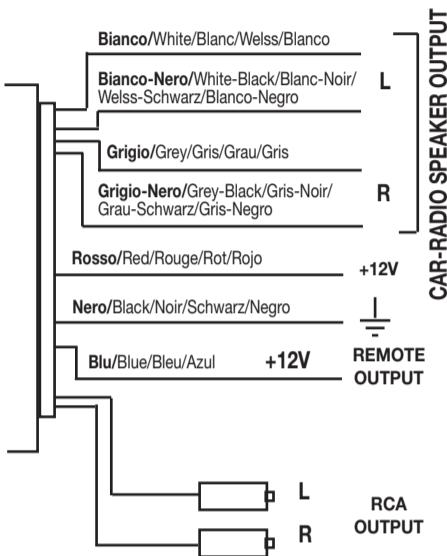

Phonocar
Via F.Ili Cervi, 167/C
42100 Reggio Emilia (Italy)

5/141

I - Per ricavare un'uscita +12V (remote) dal segnale amplificato dell'autoradio.
GB - To create a +12V (Remote) exit from the amplified radio-signal.
F - Pour creer une sortie +12V (Remote) du signal amplifie de l'autoradio.
D - Gewinnt von einem Verstärkten radio-signal einen +12V (Remote)-Ausgang.
E - Para extraer una salida de +12V (Remoto) desde la señal amplificada del autoradio.

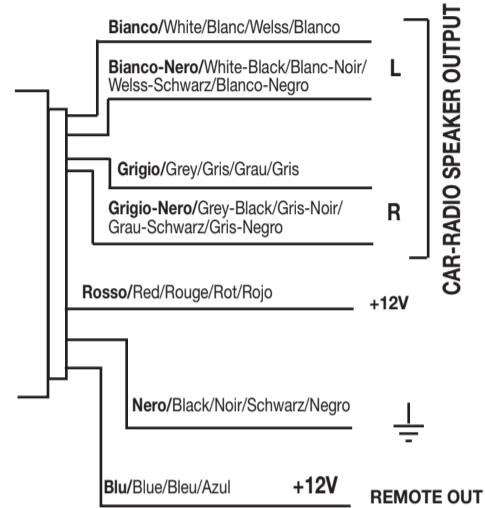


Phonocar
Via F.Ili Cervi, 167/C
42100 Reggio Emilia (Italy)

5/140

ILLUMINAZIONE AUTORADIO RADIO-ILLUMINATION

I - Mantiene inalterata l'illuminazione dell'autoradio anche a fari accesi.
GB - Keeps the radio-illumination unchanged, even with switched-on headlights.
F - Pour maintenir l'illumination de l'autoradio unchanged meme quand les phares sont allumes.
D - Für die konstante Beibehaltung der Radio-Beleuchtung, auch beim Einschalten der Scheinwerfer.
E - Mantiene inalterada la iluminación del autoradio tambien con las luces encendidas.

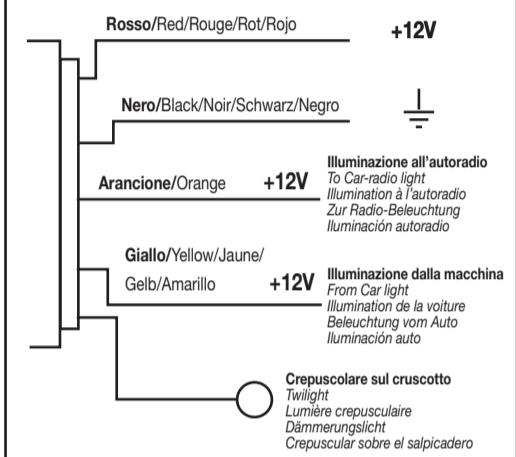

Phonocar
Via F.Ili Cervi, 167/C
42100 Reggio Emilia (Italy)