 
 
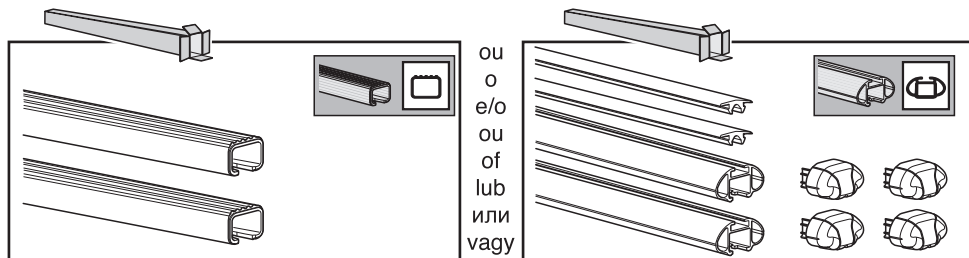 


- F** Instructions de montage
- E** Instrucciones de montaje
- I** Istruzioni per il montaggio
- PT** Instruções de montagem
- NL** Montage-instructies
- PL** Instrukcja montażu
- RU** Инструкции по установке
- RO** Instrucțiuni de montaj

 
 
 
TOYOTA Corolla Verso III, 5-portes/doors, 04-08
TOYOTA Verso, 5-portes/doors, 09-

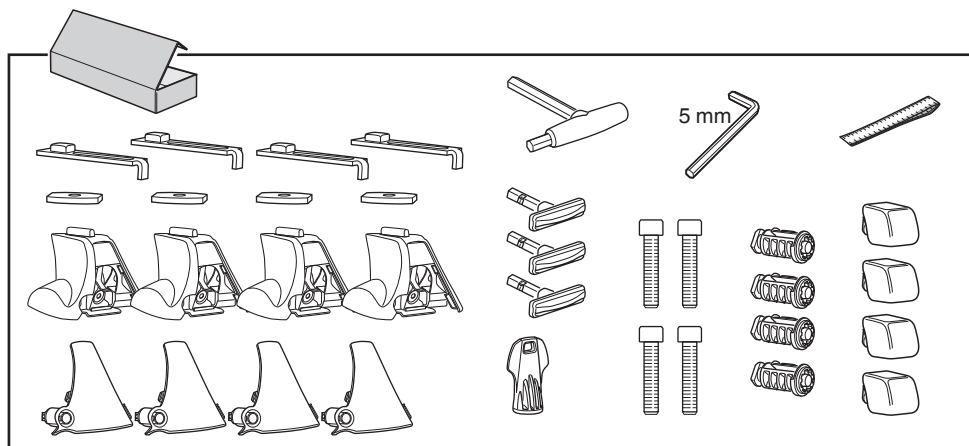


ou
o
e/o
ou
of
lub
или
vagy

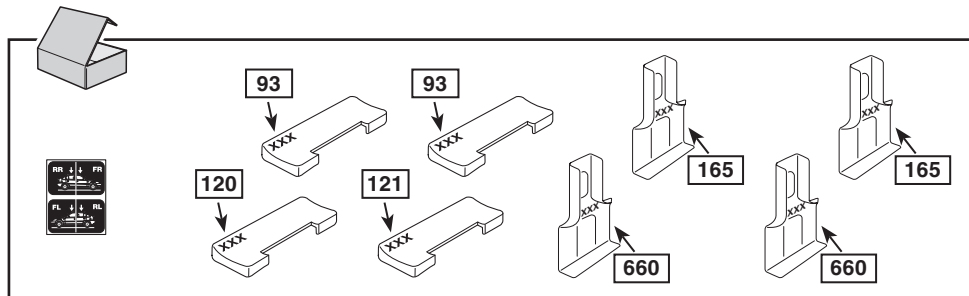


1

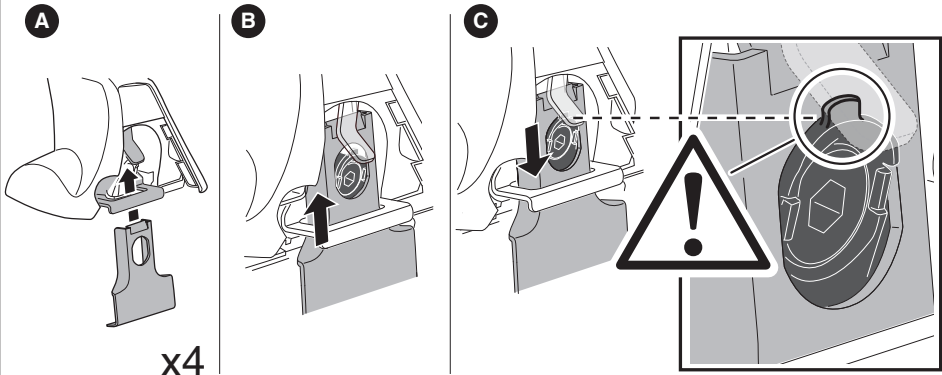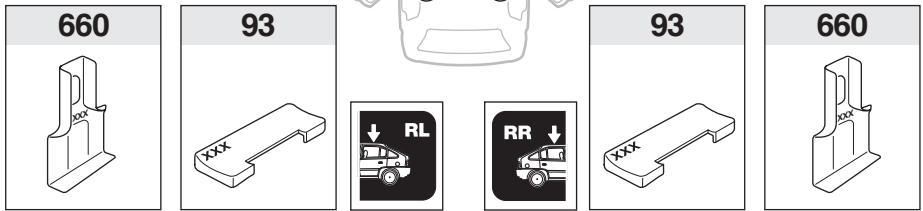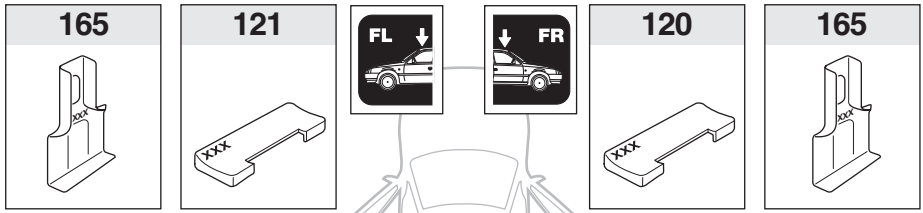

x4






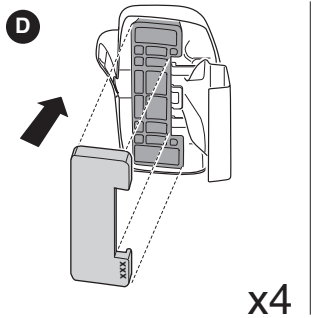 


x4



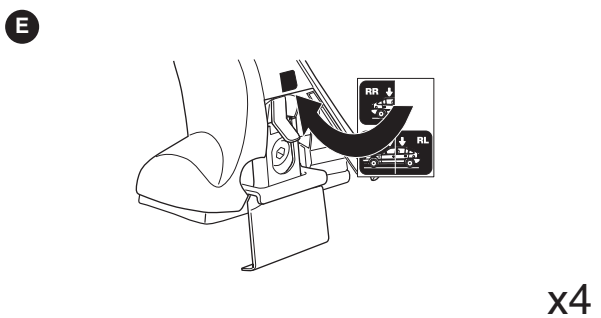 


x4

      
2

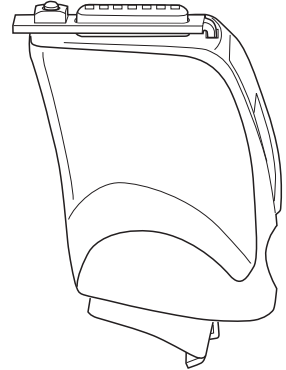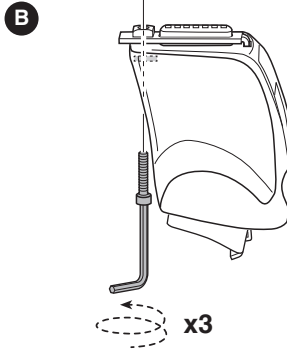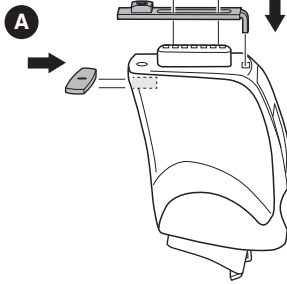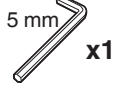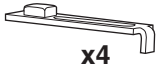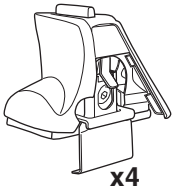

3

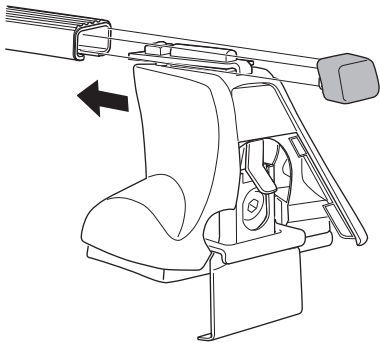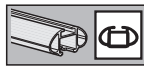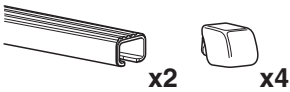   

x4

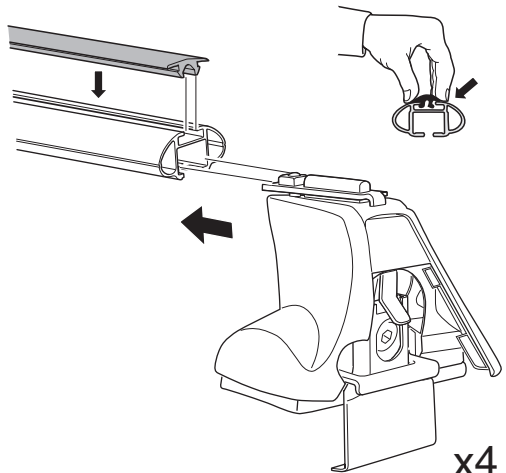 


x4

4








 x1

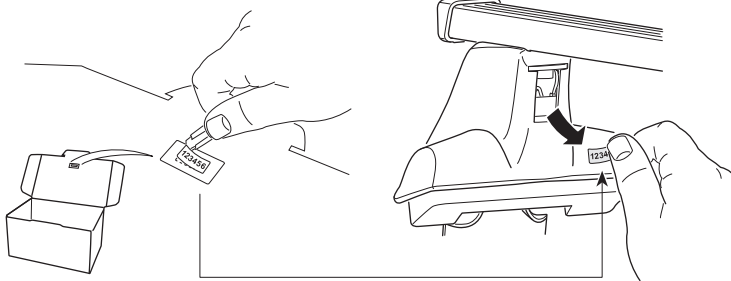


x1

     5



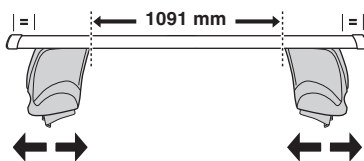
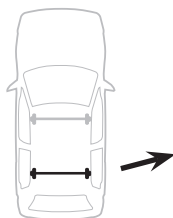
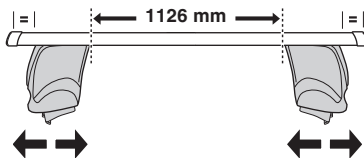
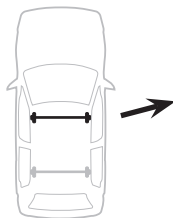
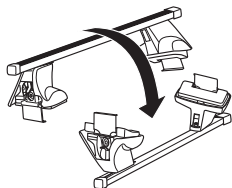


x1

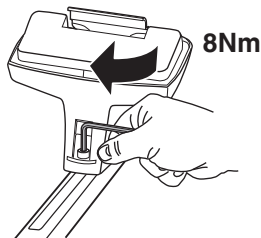 

x4

      
 
6

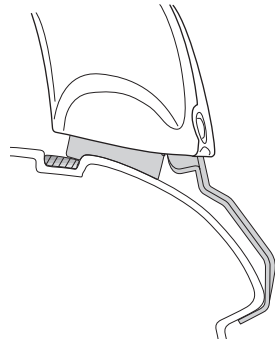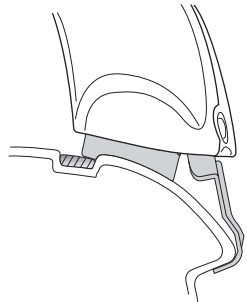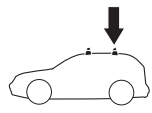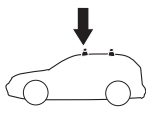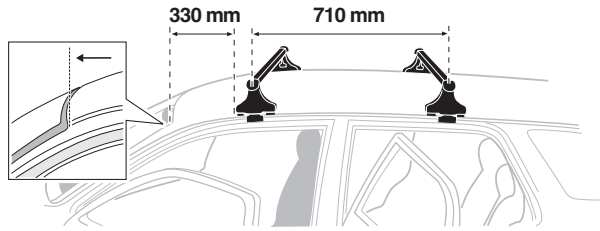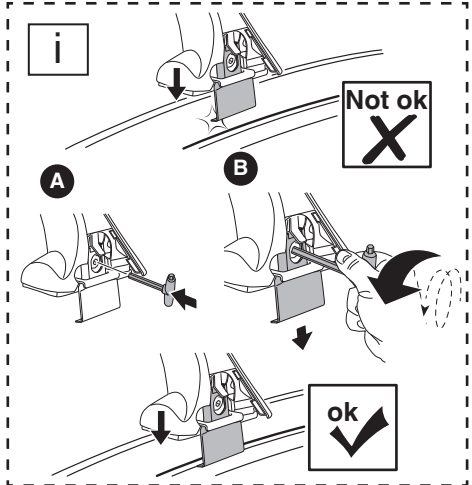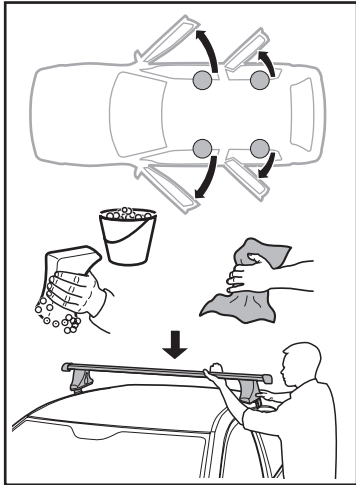


7



  
1

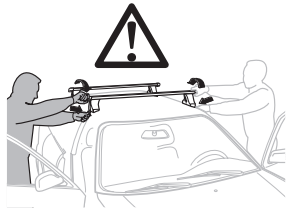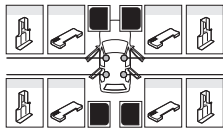

 - F Serrer alternativement chaque côté
- E Apretar alternativamente
- I Alternare il serraggio delle viti
- PT Aperte alternadamente
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- PL Śruby dokręcaj naprzemiennie
- RU Затягивайте попеременно
- RO Strângeți alternativ

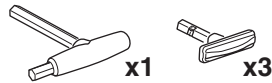


A

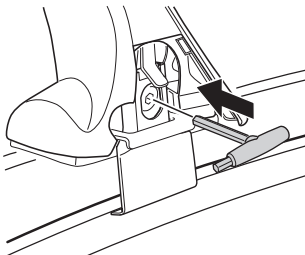 


B

 x4

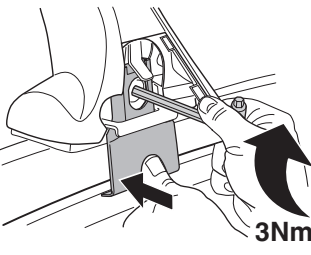


3Nm

 C

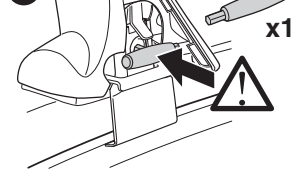

x1

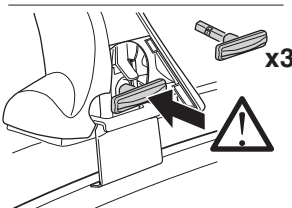 

x3

 


8




x4


A

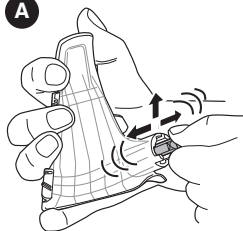

B

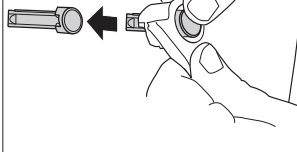 

C


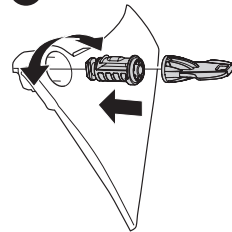 


x4





x4

  D

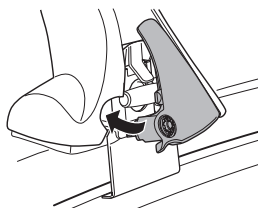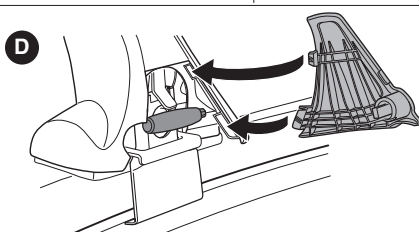

x1




 
 
E




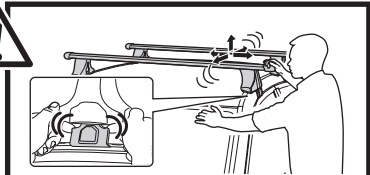
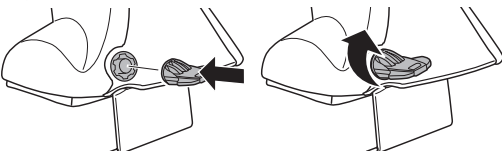




F Démontage
E Desmontaje
I Rimozione
PT Remoção

          NL Demontage
PL Wymontowywanie
RU СНЯТИЕ
RO Demontare

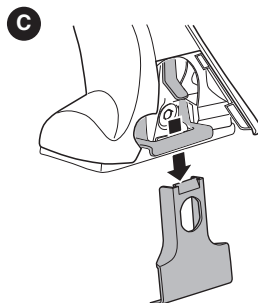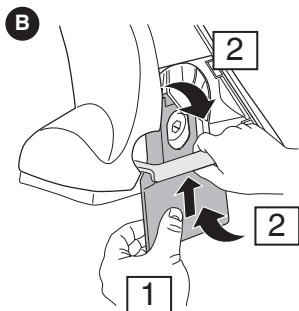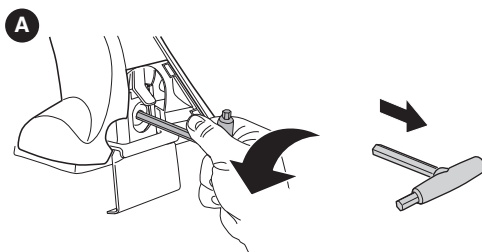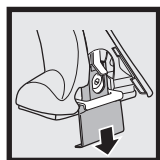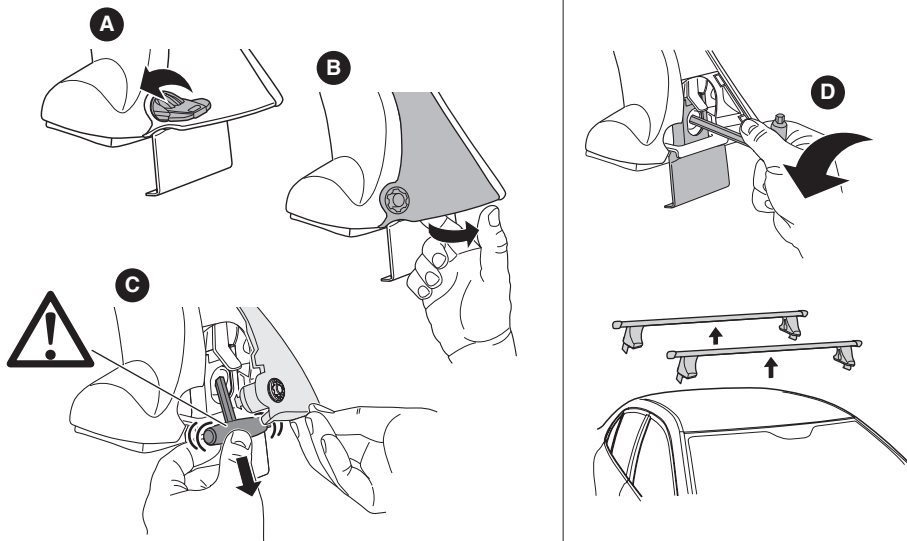

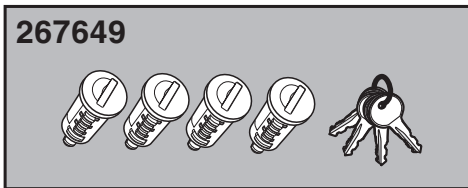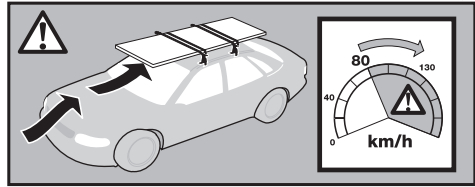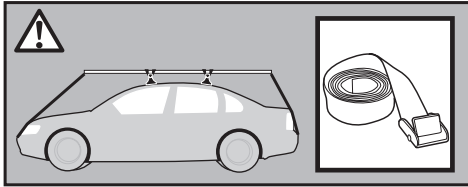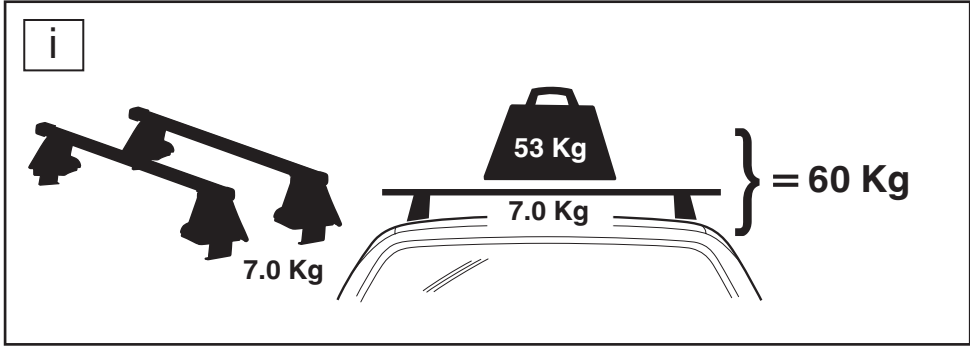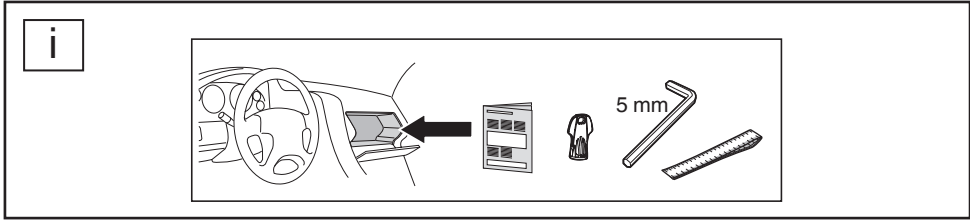

NORAUTO:
511/589 rue des Seringats
59262 Sainghin-en-Mélantois
FRANCE