

GUIDE UTILISATEUR & GARANTIE

COSMO
bike

Cosmo Bike de Cosmo Connected est un feu amovible qui peut se fixer sur le casque ou la selle du vélo, connecté à une application mobile. Il possède les fonctions de feu de position (allumage continu), de clignotants, de feu de détresse (« warning »), et de feu de décélération lorsqu'il est positionné sous la selle. Le dispositif associe sécurité visuelle, détection de chutes, envoi d'alertes aux contacts d'urgence (par SMS et/ou Email),

CONFIGURATION MINIMALE REQUISE

Le Cosmo Bike s'adapte à la grande majorité des casques de vélo disponibles sur le marché. Afin de profiter de l'ensemble des services vous devez impérativement être équipé d'un smartphone nouvelle génération configuré comme suit :
IOS (Apple) : Version 10 ou supérieure. Android : Version 5 ou supérieure.
IOS & Android : Sim GSM + GPS + Bluetooth smart 4

ALLUMER/ÉTEINDRE

Une fois chargé, vous pouvez commencer à utiliser votre Cosmo Bike. Pour l'allumer, il vous suffit d'effectuer 2 tapotements successifs sur l'extrémité du boîtier. Pour l'éteindre, reproduire la même manipulation, ou passer par l'application.

AVANT LA PREMIÈRE UTILISATION

1. Branchez votre Cosmo Bike via le cordon micro-USB fourni. Le Cosmo s'allume, s'éteint progressivement. Le témoin de charge (point rouge lumineux sur le côté gauche) reste allumé jusqu'à la charge complète.
2. Débranchez-le puis activez-le (2 tapotements successifs sur le côté : Le Cosmo s'allume)

L'APPLICATION MOBILE

1. Téléchargez l'application via l'Apple store ou le Google Play store puis lancez l'application*
2. Allez dans le menu « mes Cosmo » pour sélectionner votre appareil (NB : Connexion viable uniquement par l'application et non par les réglages Bluetooth du téléphone)
3. Une fois votre appareil connecté, une mise à jour vous est proposée, acceptez-la
4. Configurez le mode d'attache souhaité (« casque » ou « selle »)

* Une fois installée, ouvrez l'application Cosmo Bike et suivez les indications pour la création d'un compte. Si vous en possédez déjà un, saisissez vos identifiants pour vous connecter. Vous pouvez également créer un compte depuis notre site cosmoconnected.com. L'application Cosmo Connected est gratuite, tout comme la création d'un compte qui vous permet d'ajouter 3 contacts d'urgence qui seront avertis par SMS et/ou par email si un incident est détecté par votre Cosmo Bike.

FONCTIONS PRINCIPALES

Clignotants / Détection de chutes et feu de détresse* / Feu de position / Feu de décélération.**

Ces modes d'allumage peuvent être manuellement activés/désactivés depuis l'application mobile et/ou via la télécommande (accessoire en option).

* L'utilisation des feux de détresse est réglementée dans chaque pays, se conformer à la loi en vigueur.

** Pour une question de confort visuel, le mode d'allumage « feu de décélération » n'est pas actif lorsque le Cosmo Bike est attaché au casque.

TECHNOLOGIE SANS FIL

Le Cosmo Bike renferme un émetteur-récepteur radio Bluetooth 4.0. (Basse énergie).

Puissance d'émission : -8,4 dBm/plage de fréquence : 2400 à 2483,5

PIRE maximale = -8,4 dBm.

BATTERIE

Le Cosmo Bike est équipé d'une batterie d'une capacité de 900 mAh rechargeable par le biais d'un micro USB de 5 V (inclus). Le chargement dure environ 220 minutes (3 h 40 min). L'autonomie de la batterie est de 8 heures en allumage continu (peut varier en fonction de l'utilisation).

L'APPLICATION MOBILE

- Ne tentez pas de remplacer la batterie de votre Cosmo Bike. Elle est intégrée et n'est pas remplaçable
- Chargez la batterie conformément aux instructions fournies dans ce guide
- Utilisez uniquement le chargeur livré avec votre produit pour charger la batterie
- Chargez votre Cosmo Bike à l'aide d'un ordinateur, d'une station d'accueil alimentée ou d'une alimentation certifiée
- Ne tentez pas d'ouvrir la batterie intégrée.

RECHARGER VOTRE COSMO BIKE

Chargez votre Cosmo Bike avec le cordon micro-USB fourni. Un témoin lumineux s'allume pour indiquer la charge et s'éteint lorsqu'elle est terminée. Vérifiez le niveau de la batterie depuis l'application Cosmo Bike.

ATTACHER VOTRE COSMO BIKE (MODE « CASQUE » OU « SELLE »)

Un dépliant expliquant les différents modes d'attache vous est fourni dans l'emballage de votre Cosmo Bike.

RECOMMANDATIONS D'USAGE

N'essayez pas de remplacer la batterie, d'ouvrir le boîtier ou de démonter votre Cosmo Bike. Chacune de ces actions entraînera l'annulation de la garantie et peut présenter des risques pour la sécurité. Les substances contenues dans les batteries peuvent être néfastes pour l'environnement ou causer des blessures si elles sont manipulées et éliminées de manière inappropriée.

- N'exposez pas votre Cosmo Bike à des températures extrêmes (Le Cosmo est conçu pour fonctionner en décharge : entre -20 °C et +60 °C, et lors du chargement : entre 0 °C et +45 °C)
- N'utilisez pas de produit abrasif pour nettoyer votre produit Cosmo Bike ou ses accessoires.
- Ne jetez pas votre Cosmo Bike au feu. La batterie pourrait exploser.
- Chargez la batterie conformément aux instructions fournies dans ce guide. Utilisez uniquement un ordinateur, une source d'alimentation ou un chargeur certifié par un laboratoire d'essai reconnu avec un câble de chargement autorisé par COSMO CONNECTED.
- Ne chargez pas votre Cosmo Bike lorsqu'il est mouillé.

ATTENTION



Risque d'explosion si la batterie est remplacée par une batterie de type incorrect. La batterie incluse dans le cosmo bike ne doit être remplacée que par COSMO CONNECTED ou d'un centre de services agréé. Elle doit être recyclée ou éliminée séparément des ordures ménagères conformément aux instructions. Ce produit n'est pas un jouet. Ne laissez pas les enfants ou les animaux domestiques jouer avec votre Cosmo Bike. Le produit contient de petits éléments qui peuvent présenter un risque d'étouffement.

RENSEIGNEMENTS SUR L'ÉLIMINATION ET LE RECYCLAGE

Assurez-vous de confier votre produit à un centre de recyclage. Chaque pays et province dispose de ses propres centres de recyclage pour les batteries et composants électroniques. Pour en savoir davantage quant à l'endroit où apporter votre produit, communiquez avec le service de gestion des déchets de votre municipalité ou le magasin où vous avez acheté votre produit. Ne jetez pas votre produit dans les ordures ménagères. L'élimination de l'emballage et de votre produit doit être effectuée conformément aux réglementations locales. Les batteries ne doivent pas être éliminées avec les déchets municipaux et doivent être récupérées séparément.

POIDS ET DIMENSIONS

40 grammes (Cosmo Bike seul) 91x31x24,4 mm

TENSION/COURANT

Caractéristiques nominales : 5 V  - 900 mA

DÉCLARATION DE CONFORMITÉ

Cet équipement a été testé afin de garantir sa conformité à la certification de sécurité, selon les exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE. COSMO CONNECTED déclare par la présente que cet appareil est conforme aux exigences fondamentales et aux autres dispositions pertinentes de la directive 2014/53/UE (RED). La Déclaration de Conformité complète pour chaque produit est disponible sur notre site cosmoconnected.com

COSMO CONNECTED est autorisé à appliquer la marque CE sur le Cosmo Bike, modèles CB-001-BLACK/ORANGE/BLUE/GREEN/WHITE - CBA - 02 - 001 et CB+CBA-001-BLACK/ORANGE/BLUE/GREEN/WHITE, qui indique sa conformité aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.

Conçu en France/Fabriqué au Vietnam

GARANTIE

Le COSMO BIKE comporte une garantie commerciale limitée de deux (2) ans.

COSMO CONNECTED, 6 rue Saint Dominique, 75107 Paris, France, garantit le matériel de marque COSMO CONNECTED contre les défauts de matériel et de main d'œuvre, lorsque celui-ci est utilisé conformément aux recommandations publiées dans le guide de l'utilisateur sous réserve qu'ils surviennent dans un délai de deux (2) ans suivant la date d'achat initiale par l'utilisateur final d'un produit neuf COSMO CONNECTED auprès d'un professionnel (« Période de garantie »). Les recommandations publiées comprennent notamment les spécifications techniques, les consignes de sécurité ou le manuel de l'utilisateur du Cosmo Bike. COSMO CONNECTED ne peut garantir le fonctionnement ininterrompu ou sans erreur du Cosmo Bike.

Les produits vendus par COSMO CONNECTED sont conformes à la réglementation en vigueur en France et ont des performances compatibles avec des usages non professionnels.

Les produits fournis par COSMO CONNECTED bénéficient de plein droit et sans paiement complémentaire, indépendamment du droit de rétractation, conformément aux dispositions légales :

- de la garantie légale de conformité, pour les produits apparemment défectueux, abîmés, endommagés, ou ne correspondant pas à la commande;
- de la garantie légale contre les vices cachés provenant d'un défaut de matière, de conception ou de fabrication affectant les produits livrés et les rendant impropres à l'utilisation; dans les conditions et selon les modalités visées dans l'encadré ci-dessous.

La garantie légale de conformité s'applique indépendamment de la garantie commerciale pouvant éventuellement couvrir le produit. Le client peut décider de mettre en œuvre la garantie contre les défauts cachés du produit conformément à l'article 1641 du Code civil; dans ce cas, il peut choisir entre la résolution de la vente ou une réduction du prix de vente conformément à l'article 1644 du Code civil.

Nous vous rappelons que dans le cadre de la garantie légale de conformité, le client bénéficie d'un délai de deux (2) ans à compter de la livraison du bien pour agir à l'encontre du vendeur ; peut choisir entre la réparation ou le remplacement du produit commandé, sous réserve des conditions de coût, prévues par l'article L 217-9 du Code de la consommation ; est dispensé de rapporter la preuve de l'existence du défaut de conformité du produit durant les 24 mois suivant la livraison du produit.

Afin de faire valoir ses droits, le client devra informer la société COSMO CONNECTED, par écrit, de la non-conformité des produits ou de l'existence de vices cachés dans les délais ci-dessus visés et retourner les produits défectueux dans l'état dans lequel ils ont été reçus avec l'ensemble des éléments accessoires (emballage, avis, chargeur, etc.).

COSMO CONNECTED remboursera, remplacera ou fera réparer les produits ou pièces sous garantie qui selon elle, sont non conformes ou défectueux. Les frais d'envoi seront remboursés sur la base du tarif facturé et les frais de retour seront remboursés sur présentation des justificatifs afférents. Les remboursements des produits jugés non conformes ou défectueux seront effectués dans les meilleurs délais et au plus tard dans les quatorze (14) jours suivant la constatation par COSMO CONNECTED du défaut de conformité ou du vice caché. Le remboursement s'effectuera par crédit au compte bancaire du client ou par chèque bancaire adressé à ce dernier.

La responsabilité de COSMO CONNECTED ne saurait être engagée dans les cas suivants :

- le non-respect de la législation du pays dans lequel les produits sont livrés, qu'il appartienne au client de vérifier ;
- une mauvaise utilisation, une utilisation non conforme au manuel d'utilisation, une installation défectueuse, une utilisation à des fins professionnelles, de négligence ou de défaut d'entretien de la part du client, comme en cas d'usure normale du produit, d'accident ou de force majeure ;
- de défaut de fonctionnement de l'application connectée au produit, et plus généralement du dispositif d'alerte, à raison de l'impossibilité d'accès au réseau téléphonique (notamment en zone non couverte ou d'inaccessibilité du réseau), d'une défaillance technique ou à raison des conséquences de l'accident (notamment en cas de destruction totale ou partielle du terminal mobile sur lequel est installée l'application connectée au produit).

De plus, la garantie ne saurait couvrir :

- les réparations ou remplacements de pièces en raison d'usure normale ;
- toute adaptation du produit qui serait nécessaire à des fins de mise en conformité avec les normes techniques ou de sécurité applicables dans un pays autre que celui pour lequel le produit a été conçu et fabriqué à l'origine, soit la France ;
- les détériorations ou défauts du produit résultant :
 - d'une mauvaise utilisation ou installation du produit (utilisation non conforme à l'usage auquel le produit est destiné, installation ou utilisation non conforme aux instructions de COSMO CONNECTED ou aux normes techniques ou de sécurité en vigueur dans le pays où il est utilisé, etc.);
 - d'un entretien du produit non conforme aux instructions de COSMO CONNECTED ou d'une négligence dans l'entretien du produit ;
 - d'une mauvaise manipulation ou d'un mauvais usage du produit (fausse manœuvre, chute, chocs, etc.) ou d'un environnement inapproprié (exposition à l'humidité, à une chaleur excessive, contacts avec le sable ou avec toute autre substance, alimentation électrique inadéquate, etc.) ;
 - d'une modification ou réparation du produit non effectuée par un prestataire agréé par COSMO CONNECTED.

Par ailleurs, le client reconnaît que le produit est un dispositif de détection de décélération complémentaire aux avertisseurs lumineux de freinage (feux d'arrêt); il ne peut s'y substituer. Il reconnaît également qu'en fonction des conditions de circulation et des conditions climatiques, le produit est susceptible de ne pas détecter des situations de freinage, et l'accepte expressément.


PLUS GÉNÉRALEMENT, IL N'EXISTE AUCUNE GARANTIE S'ÉTENDANT AU-DELÀ DE LA GARANTIE ÉNONCÉE AUX PRÉSENTES, ET TOUTE GARANTIE IMPLICITE, Y COMPRIS LES GARANTIES IMPLICITES D'USAGE COMMERCIAL COURANT OU D'APTITUDE À DES FINS PARTICULIÈRES, EST EXPRESSÉMENT EXCLUE.

AUCUN REVENDEUR N'EST EN DROIT DE MODIFIER LES CONDITIONS ET LES CLAUSES DE RESPONSABILITÉ ÉNONCÉES CI-DESSUS.

Comment utiliser la télécommande (en option) How to use the remote control (optional)

Clignotant gauche
Turn left

Clignotant droite
Turn right

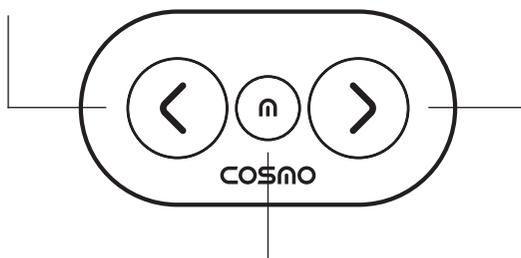

Bouton du centre
Middle button

1.

Feu de freinage
(en position tige
de selle)

Brake light
(in the seatpost
position)

2.

Feu de position
& feu de freinage
(en position tige
de selle)

Continuous
ignition & brake
light (in the
seatpost position)

3.

Allumage continu
& feu de détresse
Continuous ignition
& warning light

4.

Feu de freinage
(en position tige
de selle)

Brake light
(in the seatpost
position)

USER'S GUIDE & WARRANTY

COSMO
bike

Cosmo Bike by Cosmo Connected is a removable light that can be attached to a helmet or a bike seat and connected to a mobile application. The functions include position lighting (continuous), indicator lights, warning lights and deceleration lights when installed under the seat. The device associates visual safety, fall detection and emergency warnings (via SMS and/or email).

MINIMAL SETUP REQUIRED

Cosmo Bike adapts to most bike helmets available on the market.

To be able to enjoy all the features, you must have a next generation smartphone such as: IOS (Apple): Version 10 or higher

Android: Version 5 or higher

IOS & Android: GSM + GPS + Bluetooth smart 4 SIM

ON/OFF

Once charged, you can begin using your Cosmo Bike. To turn it on, you just tap the end of the case twice. To turn it off, you do the same or use the app.

BEFORE THE FIRST USE

1. Plug your Cosmo Bike in using the micro-USB cable that comes with it. The Cosmo turns on and gradually turns off. The recharge indicator LED (red light on the left side) stays on until fully charged.

2. Unplug and then activate (tap the side twice: The Cosmo turns on)

MOBILE APP

1. Download the app from the Apple Store or Google Play Store and then start the app*

2. Go to the "my Cosmo" menu to select your device (Note: only connects through the app; not through the phone Bluetooth settings).

3. Once the device has connected, an update is suggested. Accept the update.

4. Set up the desired attachment mode ("helmet" or "seat")

* Once installed, open the Cosmo Bike app and follow the instructions to create an account. If you already have one, enter your ID and password to log in. You can also create an account at our site cosmoconnected.com. The Cosmo Connected app is free as is creating an account where you can add 3 emergency contacts to be notified by SMS and/or email if an incident is detected by your Cosmo Bike.

MAIN FUNCTIONS

Indicator lights / Fall detection and warning lights* / Position lights / Deceleration lights.**

These light modes can be manually enabled/disabled via the mobile app and/or via the remote control (optional accessory).

* The use of warning lights is regulated in each country; you must observe the laws in effect.

** The "deceleration" light mode is not enabled when the Cosmo Bike is attached to a helmet for visual comfort.

WIRELESS TECHNOLOGY

The Cosmo Bike is equipped with a Bluetooth 4.0 transmitter-receiver. (Low energy).

Transmitter power: -8.4 dBm/frequency bandwidth: 2400 to 2483.5

EIRP maximum = -8.4 dBm.

BATTERY

The Cosmo Bike is equipped with a 900 mAh battery that can be recharged with a 5 V micro-USB (included). A fully charged battery lasts around 220 minutes (3 hr 40 min.). The battery autonomy is 8 hours with continuous lighting (may vary based on the use).

PRECAUTIONS REGARDING THE BUILT IN BATTERY

- Do not attempt to replace the battery in your Cosmo Bike. It is built in and cannot be replaced.
- Charge the battery in accordance with the instructions provided in this guide
- Only use the charger that comes with your product to charge the battery
- Charge your Cosmo Bike using a computer, a powered docking station or certified power station
- Do not attempt to open the built-in battery.

RECHARGING YOUR COSMO BIKE

Charge your Cosmo Bike with the micro-USB cable provided. A LED indicator will light up to indicate it is charging and will turn off when fully charged. Check the battery level using the Cosmo Bike app.

ATTACHING YOUR COSMO BIKE ("HELMET" OR "SEAT" MODE)

A brochure explaining the different ways to attach it is provided in the Cosmo Bike packaging.

RECOMMENDATIONS FOR USE

Do not try to replace the battery or open the case or take your Cosmo Bike apart. Each of these actions will void the warranty and may pose safety risks. The substances contained in batteries may be harmful for the environment or cause injury if handled and disposed of inappropriately.

- Do not expose your Cosmo Bike to extreme temperatures (The Cosmo is designed to operate when uncharged: -20°C to $+60^{\circ}\text{C}$, and while charging: 0°C to $+45^{\circ}\text{C}$)
- Do not use any abrasive products to clean your Cosmo Bike or the accessories.
- Do not throw your Cosmo Bike onto a fire. The battery may explode.
- Charge the battery in accordance with the instructions provided in this guide.
Only use a computer, a power source or a charger certified by a renowned testing laboratory with a charging cable authorised by COSMO CONNECTED.
- Do not charge your Cosmo Bike when wet.

WARNING

Risk of explosion if the battery is replaced with an incorrect battery. The battery included with the Cosmo Bike must not be replaced by anyone other than COSMO CONNECTED or an authorised service centre. It must be recycled or disposed of separately from household waste as per the instructions. This product is not a toy. Do not let children or pets play with your Cosmo Bike. The product contains small parts which can be a choking hazard.

INFORMATION ON WASTE DISPOSAL AND RECYCLING

Dispose of your product at a recycling centre. Each country and province has its own recycling centres for batteries and electronics. To find out where to dispose of your product, contact the waste management service in your area or the shop where you purchased the product. Do not throw the device into the household waste. The packaging and product must be disposed of in accordance with local regulations. Batteries must not be disposed of with municipal waste and must be separated for collection.

WEIGHT AND DIMENSIONS

40 grams (only the Cosmo Bike) 91x31x24.4 mm

VOLTAGE/POWER

Caractéristiques nominales : 5 V  - 900 mA

DECLARATION OF CONFORMITY

This device was tested to ensure safety certification conformity in accordance with the essential requirements and other provisions of Directive 2014/53/EU.

COSMO CONNECTED hereby declares this device complies with the essential requirements and other provisions of Directive 2014/53/EU (RED). The complete Declaration of Conformity for each product is available at our site cosmoconnected.com

COSMO CONNECTED is authorised to affix the CE marking to Cosmo Bike models CB-001-BLACK/ORANGE/BLUE/GREEN/WHITE - CBA - 02 - 001 et CB+CBA-001 BLACK/ORANGE/BLUE/GREEN/WHITE which indicates it complies with the essential requirements and other provisions in Directive 2014/53/EU.

Designed in France/Made in Vietnam

WARRANTY

ITEM RETURN POLICY AND WARRANTY

COSMO CONNECTED™ limited two- (2-) year commercial warranty:

COSMO CONNECTED™ of 6 rue Duret, 75116 Paris, France, shall guarantee its COSMO CONNECTED™ brand hardware against hardware and manufacturing defects whenever it is used per the recommendations in the user manual provided that such are discovered within two (years) of the date of initial purchase from a professional by an end user of a new COSMO CONNECTED™ product (Warranty Period). Published recommendations include such matters as technical specifications, safety advice or operating manuals for Cosmo Bike. COSMO CONNECTED™ does not guarantee that Cosmo Bike will function continuously or without error.

Items sold by COSMO CONNECTED™ are conformant to current French regulations, and their performance is suitable for non-professional applications.

Items supplied by COSMO CONNECTED™ entitle you fully and without additional fees, your right to return such items notwithstanding, and pursuant to the relevant statutes:

- to a legal warranty of conformity for Products that are obviously defective, deficient, or damaged or not as ordered;
- to a legal warranty against hidden defects resulting from material, design, or workmanship defects, affecting products that are already delivered, and rendering them unsuitable for use;
- all subject to the conditions and the terms below.

The legal warranty of conformity shall be applicable apart from the commercial warranty that the Product may possibly be covered by. A Customer may decide to take advantage of the warranty against hidden product defects pursuant to the French Civil Code, Article 1641 in which case he or she may choose between having the sale voided or obtaining a sales price reduction pursuant to French Civil Code, Article 1644. It is pointed out that pursuant to the legal warranty of conformity, a Customer has a two- (2-) year period from the date of product delivery to take action against the Seller; he or she may choose between a repair or a replacement of the Product ordered subject to the cost provisions in French Consumer Code, Article L 217-9; the obligation to provide proof of Product non-conformity in the 24 months following Product delivery is waived.

To exercise his or her rights, a Customer will need to inform COSMO CONNECTED™ in writing of Product non-conformity or the existence of hidden defects within the above period of time and return the defective Products in the same condition they were when received with all the accessories (packaging, instruction, charger, etc.).

Under warranty, COSMO CONNECTED™ will reimburse the cost of, replace, or procure the repair of the Products or components that it deems non-conformant or defective. Shipping charges shall be reimbursed based on the rate charged, and the return costs shall be reimbursed upon the presentation of the relevant evidence. Reimbursement for Products deemed non-conformant or defective will take place in the shortest possible time but in no case later than fourteen (14) days after COSMO CONNECTED™ determines that there is a non-conformity or a hidden defect.

The reimbursement will be credited to a Customer's bank account or will be in the form of a bank check in the Customer's name.

COSMO CONNECTED™ shall not be held responsible under the following circumstances:

- failure to follow the laws of the country to which products are delivered which it will be the Customer's responsibility to check;
- in the event of improper use or use not as per the operating instructions, faulty installation, professional use, carelessness, or improper maintenance by a Customer as well as in the event normal Product wear and tear, an accident, or force majeure;
- run-time error of the application associated with the Product, and more generally, of the warning device, because of an inability to access the telephone network (namely, in areas without coverage or because of the network being unavailable), a technical failure or a failure related to an accident (namely, in the event the mobile terminal hosting the Product application is completely or partially destroyed).

In addition, the warranty shall not cover:

- repairs or component replacement resulting from normal wear and tear;
- any product modifications required to make the product conform to the applicable technical or safety standards of a country other than the one the product was originally designed and built for, namely, France;
- Product deterioration or failure resulting:
 - from improper Product use or installation (non-design Product utilization, installation or use non-conformant to COSMO CONNECTED™ instructions or technical or safety standards of the country of use, etc.);
 - Product maintenance violating COSMO CONNECTED™ instructions or negligent Product maintenance;
 - improper Product handling or use (incorrect operation, fall, impacts, etc.) or unsuitable environmental conditions (exposure to humidity, excessive heat, contact with sand or any other substance, improper electrical power source, etc.);
 - Product modification or repair made by a service provider not authorized by COSMO CONNECTED™.

On the other hand, the Customer shall duly take into consideration that the Product is a deceleration detector that is complementary to the visual braking indication (stop lights) and that it cannot be used instead of such indication. The Customer shall duly note that the Product may not detect braking situations under certain traffic or weather conditions and shall expressly acknowledge this fact.

IN GENERAL, THERE IS NO WARRANTY EXCEPT AS STATED HEREIN, AND ANY IMPLIED WARRANTY, INCLUDING IMPLIED WARRANTIES OF CURRENT COMMERCIAL USE OR SUITABILITY FOR A SPECIFIC PURPOSE, IS HEREBY EXPRESSLY DISCLAIMED. NO RESELLER SHALL BE AUTHORIZED TO MODIFY THE LIABILITY CONDITIONS OR TERMS STATED ABOVE.

WARNING TO USERS IN THE UNITED STATES

Federal Communication Commission Interference Statement 47 CFR Section 15.105(b). This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device Cosmo Bike by Cosmo Connected complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NO UNAUTHORIZED MODIFICATIONS

47 CFR Section 15.21 CAUTION: This equipment may not be modified, altered, or changed in any way without signed written permission from COSMO CONNECTED.

Unauthorized modification may void the equipment authorization from the FCC and will void the COSMO CONNECTED warranty. This device complies with FCC RF radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter.

ESP Encuentre la guía del usuario y las condiciones de garantía en nuestro sitio:

ITA Trova la guida dell'utente e le condizioni di garanzia sul nostro sito:

DE Das Benutzerhandbuch und die Garantiebedingungen finden Sie auf unserer Website:

POR Encontre o guia do usuário e as condições de garantia em nosso site:



info@cosmoconnected.com



COSMO CONNECTED
6 rue Saint-Dominique 75007 Paris France



+33 1 83 81 26 74
(coût d'un appel local en France)



www.cosmoconnected.com