

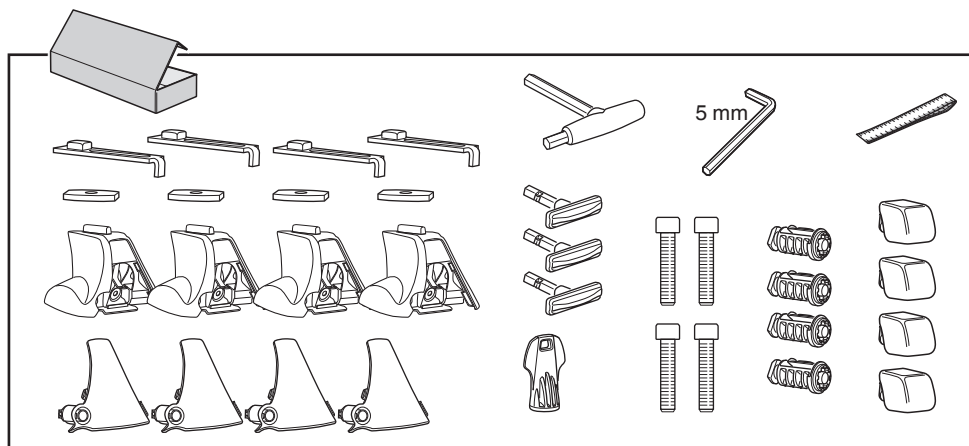
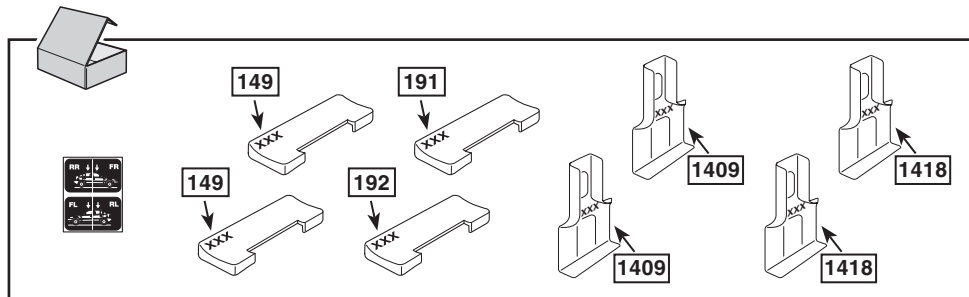
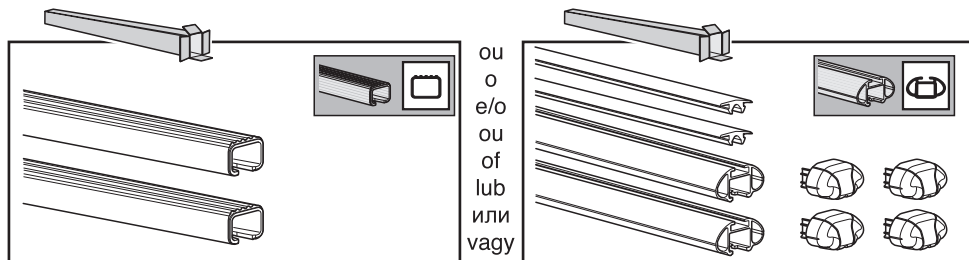
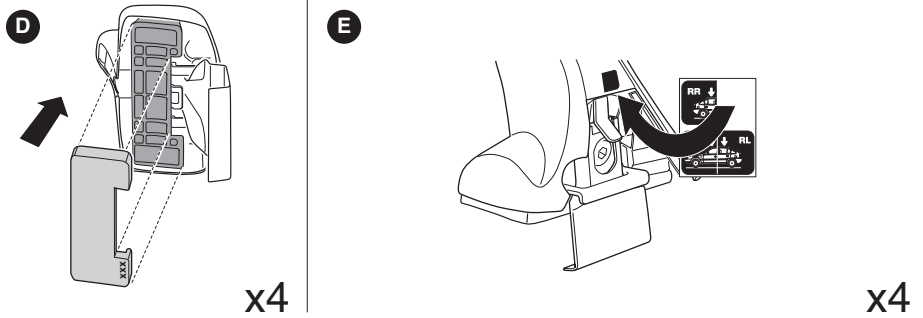
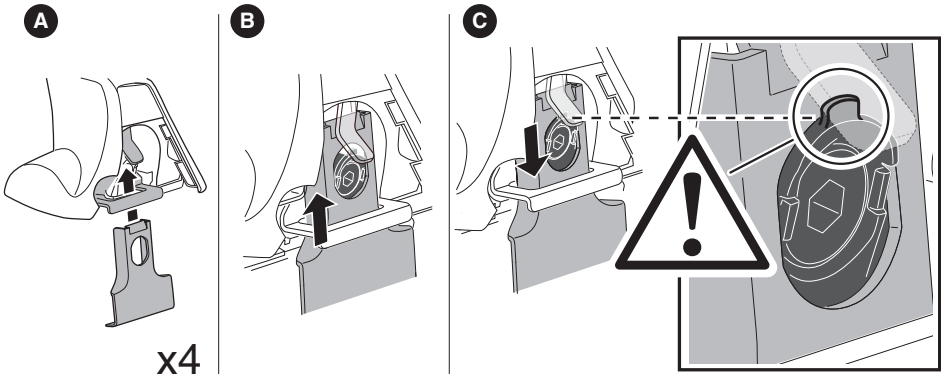


- F** Instructions de montage
- E** Instrucciones de montaje
- I** Istruzioni per il montaggio
- PT** Instruções de montagem
- NL** Montage-instructies
- PL** Instrukcja montażu
- RU** Инструкции по установке
- RO** Instrucțiuni de montaj




RENAULT Scénic (Mk.IV), 5-portes/doors, MPV, 17-

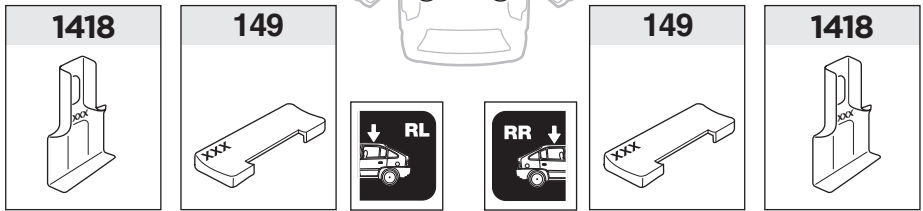


1

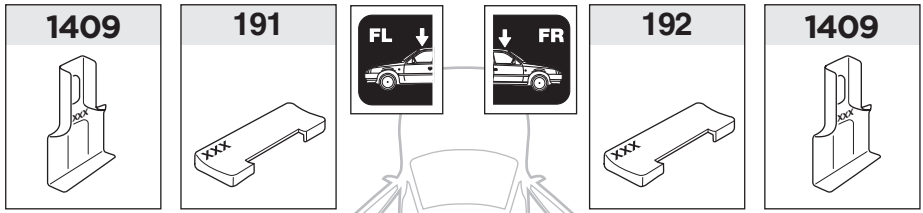



2

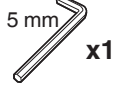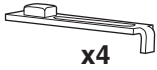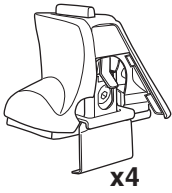






A

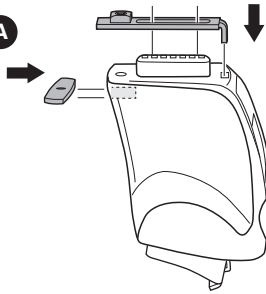

B

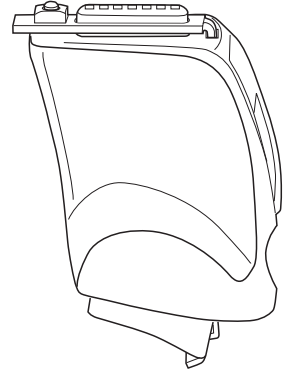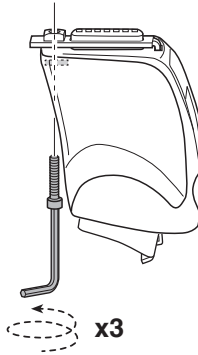


3

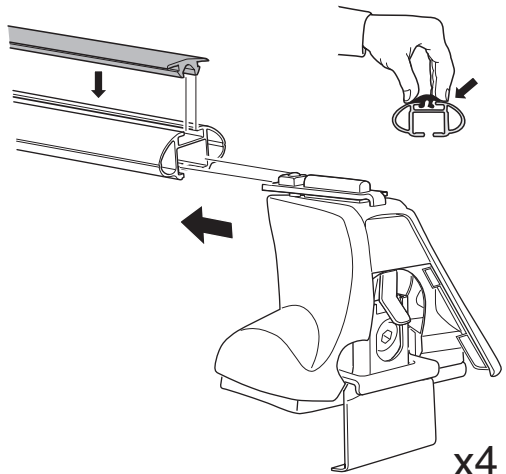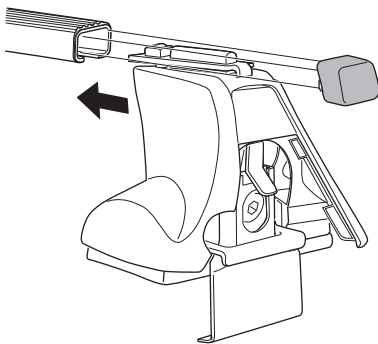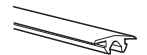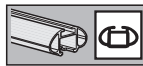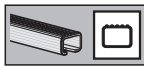

4








x1

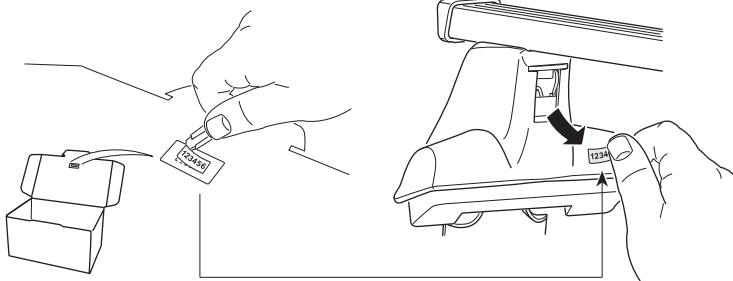


x1

5

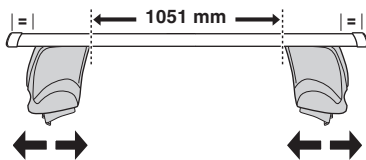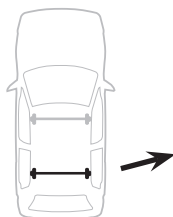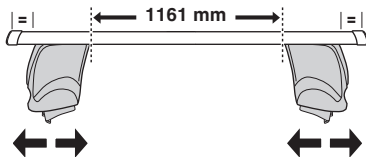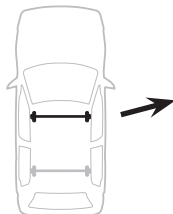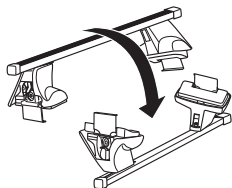

x1







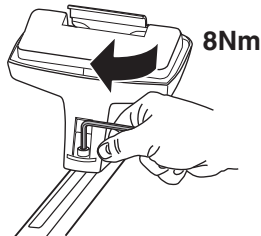


8Nm



x4



6

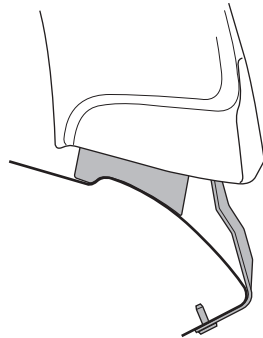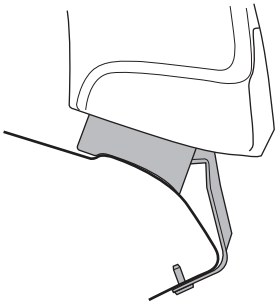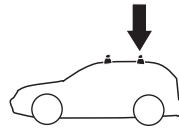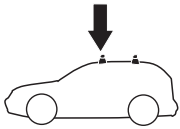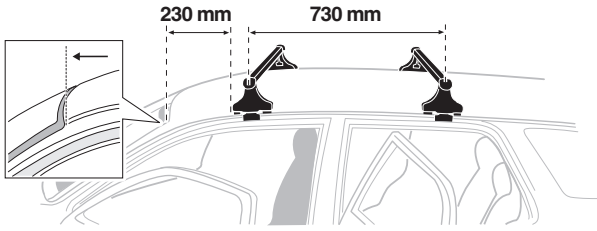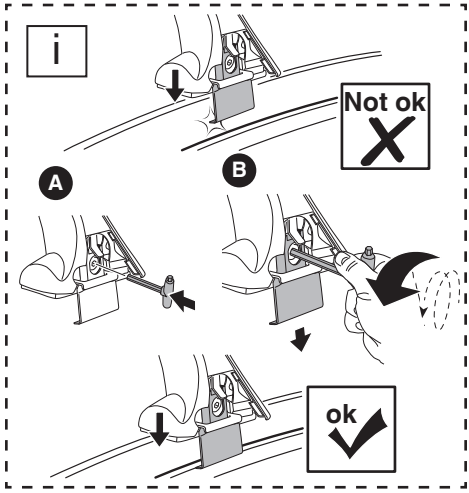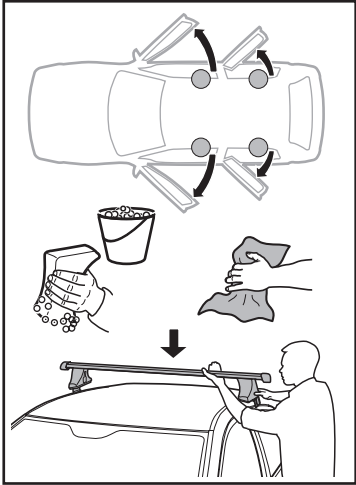


7




1

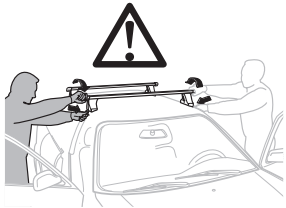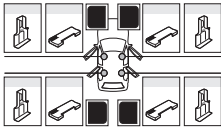


F Serrer alternativement chaque côté
 E Apretar alternativamente
 I Alternare il serraggio delle viti
 PT Aperte alternadamente
 NL Afwisselend aan de linker- en de rechterkant aandraaien
 PL Śruby dokręcaj naprzemiennie
 RU Затягивайте попеременно
 RO Strângeți alternativ

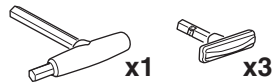

A


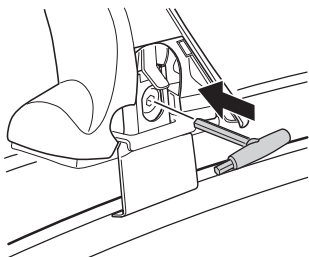


B x4

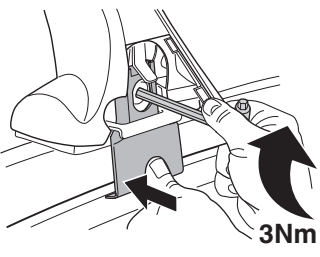

3Nm

C

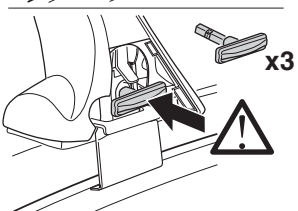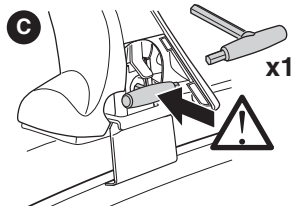

8



x4




x4




x1


A

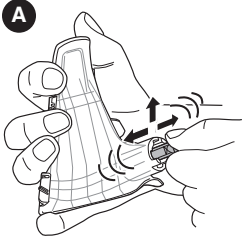

B

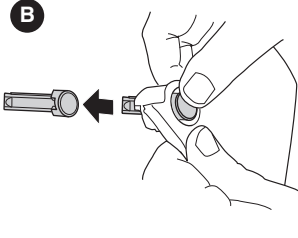


C


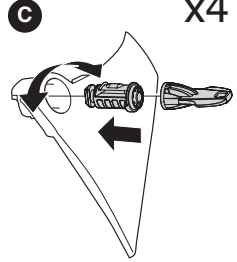


x4

D

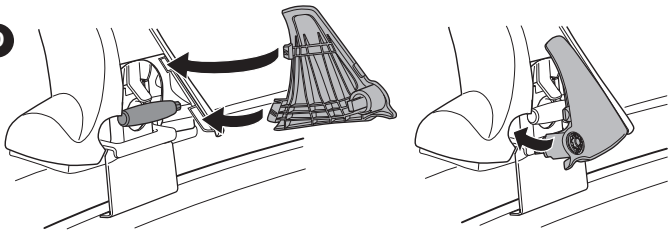






E




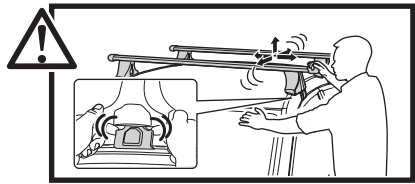
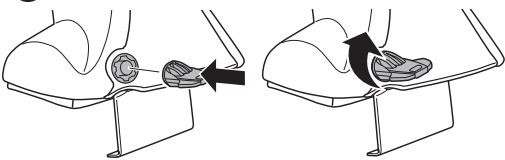




F Démontage
E Desmontaje
I Rimozione
PT Remoção

NL Demontage
PL Wymontowywanie
RU СНЯТИЕ
RO Demontare

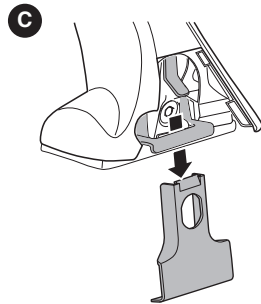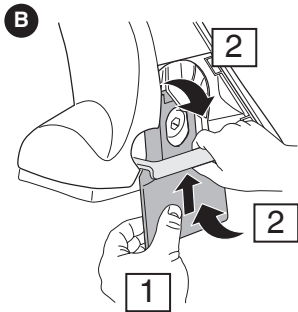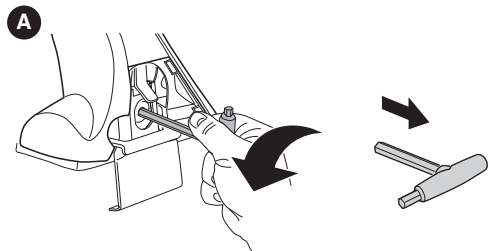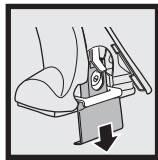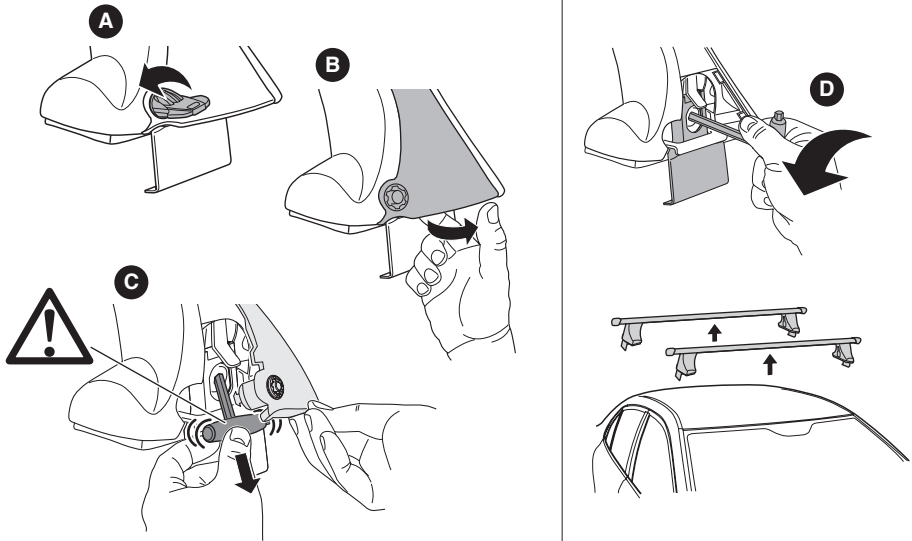

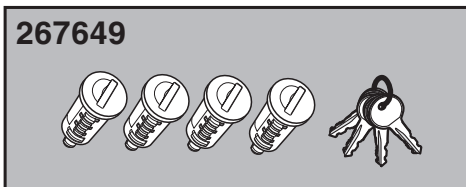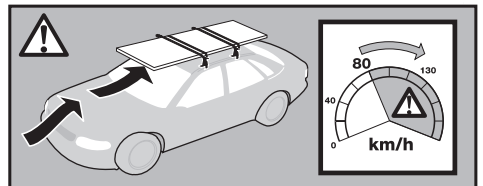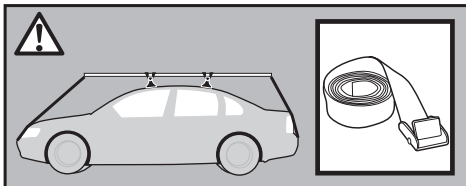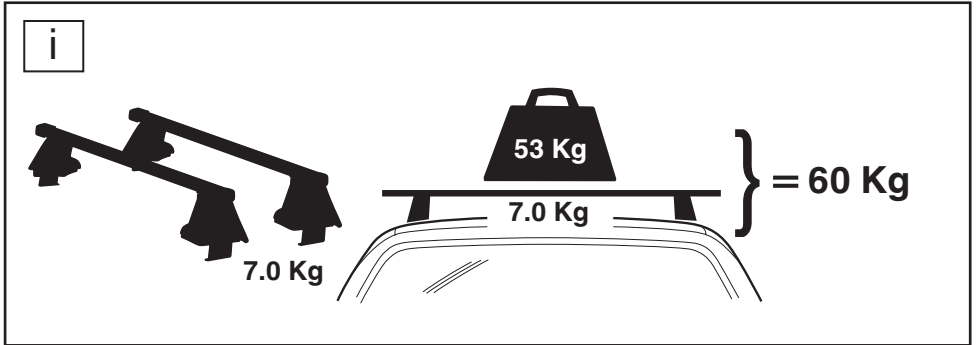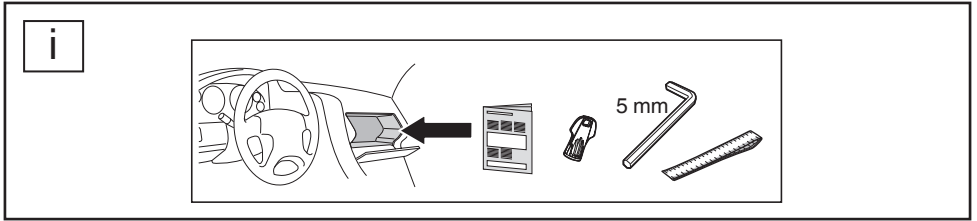

NORAUTO:
511/589 rue des Seringats
59262 Sainghin-en-Mélantois
FRANCE