






Ref	Ref															
				H m8x25	Rm8	En8	PfcR2	Rdd6	En6	Ece14	Rm6					
2104HP2000G	2104HG200G	3250 H2		X 4	X 8	X 4	X 6	X 12	X 12				55 kg	200 kg	145 kg	40'
2104CP2000G	2104CG200G	3250 H1		X 4	X 8	X 4	X 6	X 12	X 12	X 4	X 4		60 kg	200 kg	140 kg	40'
2104EP2000G	2104AG200G	3665 H1		X 4	X 8	X 4	X 8	X 16	X 16				65 kg	200 kg	135 kg	40'
2104DP3000G	2104EG200G	4325 H2		X 8	X 16	X 8	X 12	X 24	X 24				70 kg	200 kg	130 kg	40'
2104LP2000G	2104EG200G	4325L H2		X 8	X 16	X 8	X 12	X 24	X 24				85 kg	200 kg	115 kg	40'

<http://www.mts-galeries.com/mts-site-080718/mts-vf/2-espace-clients/videoMontageN/MenufilmsFRn.html>

Indice 2 - B / Crafter-Sprinter ACIER

AFF :  
CTRL :

## Volkswagen CRAFTER (2006) / Mercedes SPRINTER (2006)

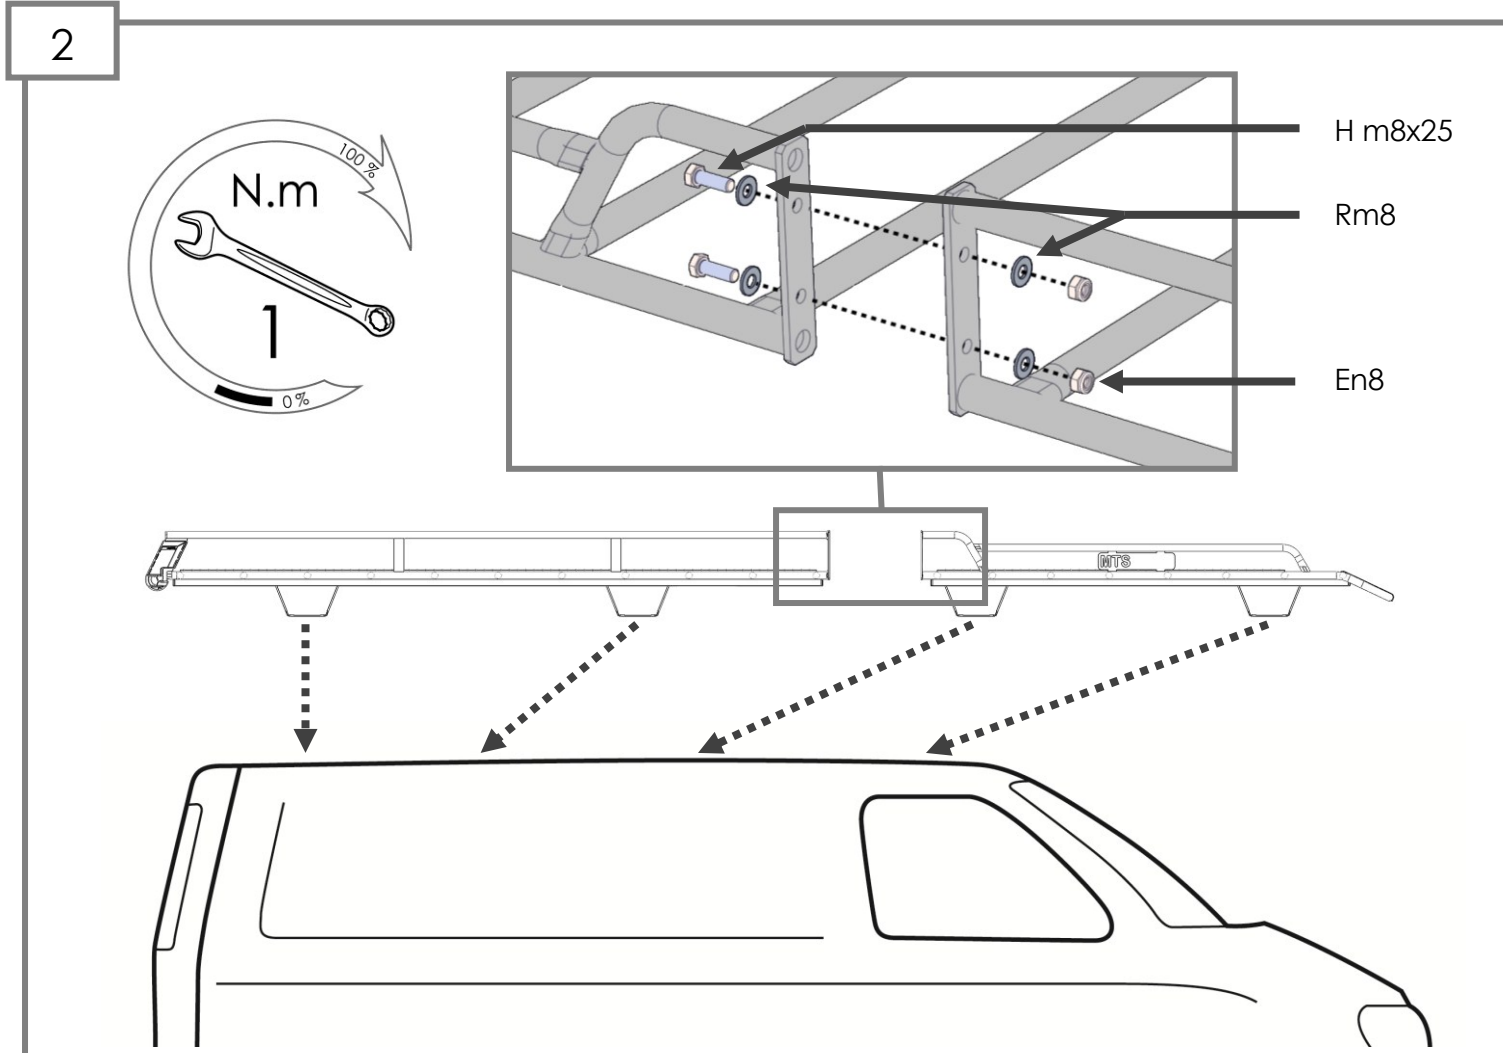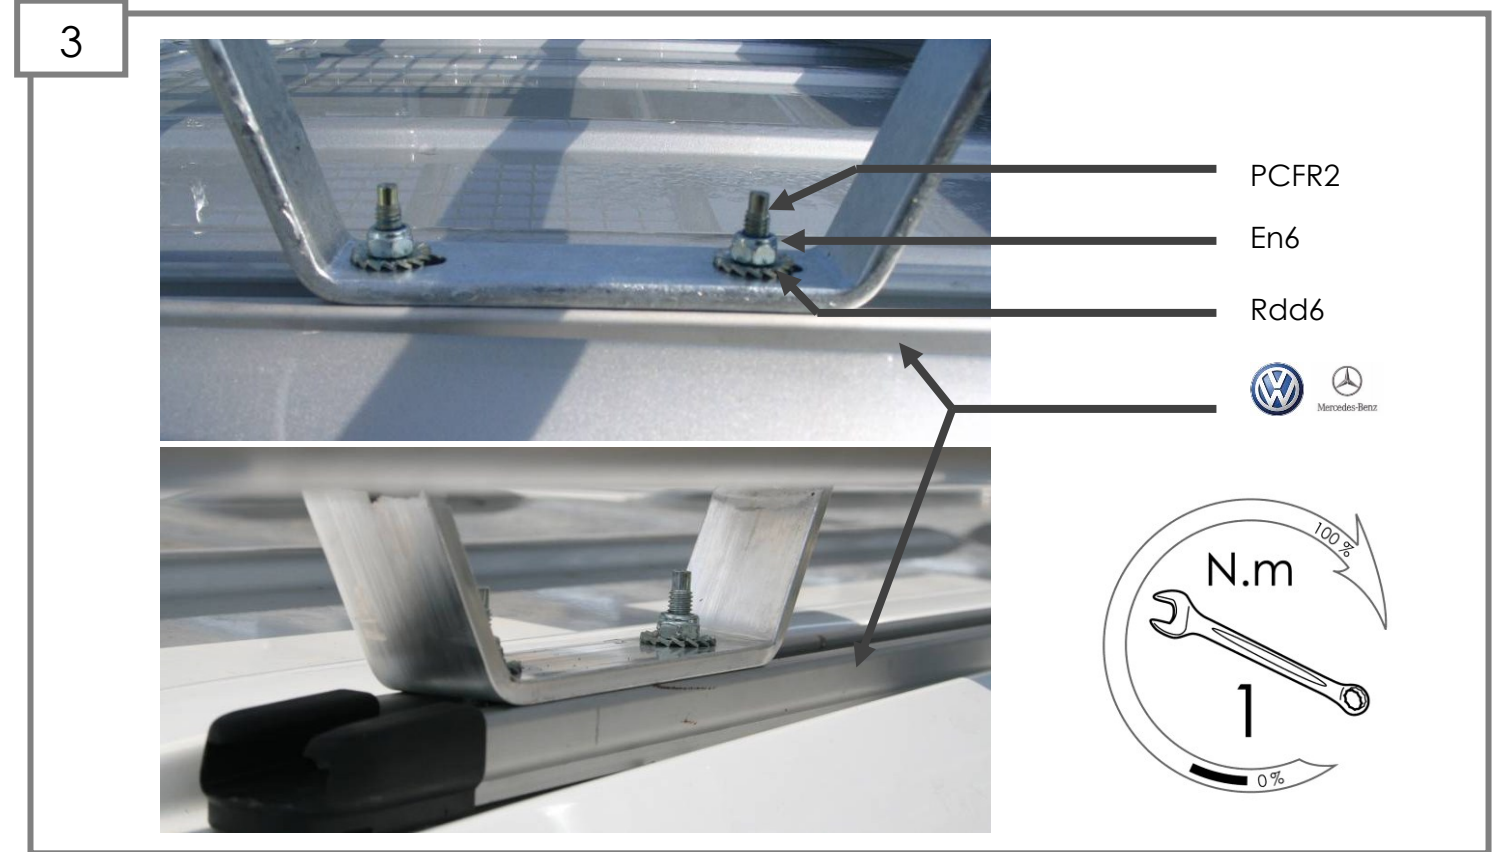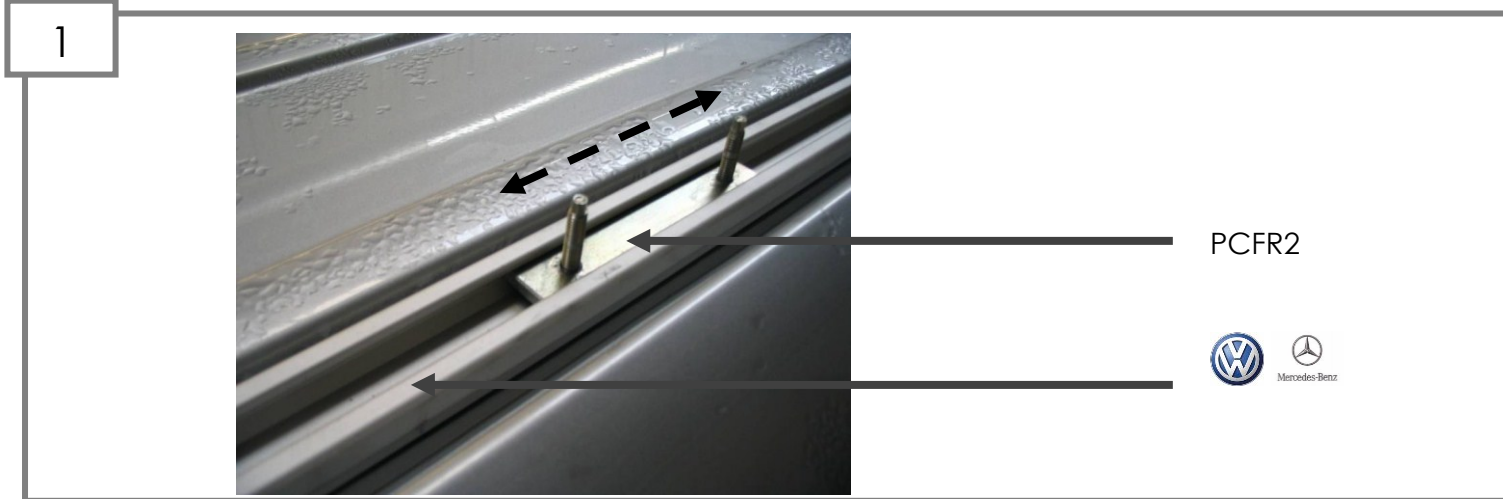

4

**F** / COUPLE DE SERRAGE REQUIS:  
Voir au dos

**GB** / REQUIRED TIGHTENING TORQUE:  
Turn over

**D** / GEFORDERTES ANZIEHDREHMOMENT:  
Rückseite

**NL** / VEREIST AANDRAAIMOMENT:  
Volgende pagina

**E** / PAR DE APRIETE REQUERIDO:  
Véase al dorso

**I** / COPPIA DI SERRAGGIO RICHIESTA:  
Pagina seguente

